

# LCD Monitor User Manual G2590VXQ LED backlight

WWW.AOC.COM ©2017 AOC. All Rights Reserved.

Safety	4
National Conventions	4
Power	5
Installation	6
Cleaning	7
Other	8
Setup	9
Contents in Box	9
Setup Base&Stand	10
Adjusting Viewing Angle	11
Connecting the Monitor	12
Wall Mounting	13
Free-Sync function	14
Adjusting	15
Setting Optimal Resolution	15
Windows 10	15
Windows 8	17
Windows 7	19
Hotkeys	21
OSD Setting	22
Luminance	23
Image Setup	24
Color Setup	25
Picture Boost	26
OSD Setup	27
Game Setting	28
Extra	29
Exit	
LED Indicator	
Driver	
Monitor Driver	
Windows 10	
Windows 8	
Windows 7	
i-Menu	42
e-Saver	43
Screen+	44
Troubleshoot	45
Specification	46
General Specification	46
Preset Display Modes	47
Pin Assignments	48
- Plug and Play	
WEEE Declaration	
Regulation	
FCC Notice	51

	Restriction on Hazardous Substances statement (India)	52
	E-Waste Declaration for India	52
Ser	/ice	53
	Warranty Statement for Europe	53
	Warranty Statement for Middle East and Africa (MEA)	55
	AOC PIXEL POLICY	57
	ISO 9241-307 CLASS 1	57
	Warranty Statement for North & South America (excluding Brazil)	58
	EASE PROGRAME	63

# Safety

# **National Conventions**

The following subsections describe notational conventions used in this document.

### Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, cautions, and warnings, and they are used as follows:



NOTE: A NOTE indicates important information that helps you make better use of your computer system.



**CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**WARNING:** A WARNING indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.

## Power

The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.

Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.

A Do not overload power strips and extension cords. Overloading can result in fire or electric shock.

To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100-240V AC, Min. 5A.

A The wall socket shall be installed near the equipment and shall be easily accessible.

# Installation

Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.

Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor.

Lo not place the front of the product on the floor.

If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.

Leave some space around the monitor as shown below. Otherwise, air-circulation may be inadequate hence overheating may cause a fire or damage to the monitor.

See below the recommended ventilation areas around the monitor when the monitor is installed on the wall or on the stand:

### Installed with stand



# Cleaning

Clean the cabinet regularly with cloth. You can use soft-detergent to wipe out the stain, instead of strong-detergent which will cauterize the product cabinet.

When cleaning, make sure no detergent is leaked into the product. The cleaning cloth should not be too rough as it will scratch the screen surface.

Please disconnect the power cord before cleaning the product.



## Other

If the product is emitting a strange smell, sound or smoke, disconnect the power plug IMMEDIATELY and contact a Service Center.

All Make sure that the ventilating openings are not blocked by a table or curtain.

LOD not engage the LCD monitor in severe vibration or high impact conditions during operation.

Do not knock or drop the monitor during operation or transportation.

# Setup

# **Contents in Box**



\*Not all signal cables (Audio, Analog, DP, HDMI cables) will be provided for all countries and regions. Please check with the local dealer or AOC branch office for confirmation.

# Setup Base&Stand

Please setup or remove the base following the steps as below. Please place the monitor on a soft and flat surface to prevent the scratch.

### Setup:



Remove:



# **Adjusting Viewing Angle**

For optimal viewing it is recommended to look at the full face of the monitor, then adjust the monitor's angle to your own preference.

Hold the stand so you will not topple the monitor when you change the monitor's angle.

You are able to adjust the monitor as below:

Tilt angle:-5° ~21°





Do not adjust the viewing angle over 21 degrees in order to avoid damage.

# **Connecting the Monitor**

Cable Connections In Back of Monitor and Computer:



- 1 Power
- 2 DP
- 3 HDMI-1
- 4 HDMI-2
- 5 VGA
- 6 Line-in
- 7 Earphone

To protect equipment, always turn off the PC and LCD monitor before connecting.

- 1 Connect the power cable to the AC port on the back of the monitor.
- 2 Connect one end of the 15-pin D-Sub cable to the back of the monitor and connect the other end to the computer's D-Sub port.
- 3 (Optional Requires a video card with HDMI port) Connect one end of the HDMI cable to the back of the monitor and connect the other end to the computer's HDMI port.
- 4 (Optional –Requires a video card with Audio port) Connect one end of the Audio cable to the back of the monitor and connect the other end to the computer's Audio port.
- 5 (Optional–Requires a video card with DP port) –Connect one end of the DP cable to the back of the monitor and connect the other end to the computer's DP port.
- 6 Turn on your monitor and computer.
- 7 Video content supporting resolution:
   VGA: 1920 x1080@60Hz (Maximum)

HDMI/DP: 1920x1080@75Hz (Maximum)

If your monitor displays an image, installation is complete. If it does not display an image, please refer Troubleshooting.

# Wall Mounting

Preparing to Install An Optional Wall Mounting Arm.



This monitor can be attached to a wall mounting arm you purchase separately. Disconnect power before this procedure. Follow these steps:

1. Remove the base.

2. Follow the manufacturer's instructions to assemble the wall mounting arm.

3. Place the wall mounting arm onto the back of the monitor. Line up the holes of the arm with the holes in the back of the monitor.

4. Insert the 4 screws into the holes and tighten.

5. Reconnect the cables. Refer to the user's manual that came with the optional wall mounting arm for instructions on attaching it to the wall.

Noted : VESA mounting screw holes are not available for all models, please check with the dealer or official department of AOC.

# **Free-Sync function**

- 1. Free-Sync function is working with DP/HDMI1/HDMI2
- HDMI/DP : 30~75Hz
- 2. Compatible Graphics Card: Recommend list is as the below, also could be checked by visiting

www.AMD.com

- AMD Radeon™ RX 480
- AMD Radeon™ RX 470
- AMD Radeon™ RX 460

Radeon Pro Duo

- AMD Radeon R9 300 Series
- AMD Radeon R9 Fury X
- AMD Radeon R9 360
- AMD Radeon R7 360
- AMD Radeon R9 295X2
- AMD Radeon R9 290X
- AMD Radeon R9 290
- AMD Radeon R9 285
- AMD Radeon R7 260X
- AMD Radeon R7 260

# Adjusting

# **Setting Optimal Resolution**

## Windows 10

### For Windows 10:

- Right click START.
- Click "CONTROL PANEL".



• Click "DISPLAY".



• Click on the "Change display settings" button.

💷 Display		-	×
← → · ↑ 💷 > Control Pane	I > All Control Panel Items > Display 🗸 🖑	Search Control Panel	P
File Edit View Tools Help			
Control Panel Home	Change size of items		?
Adjust resolution Calibrate color	To change the size of text, apps, and other items, <u>use these display settings</u> . If you want to temporarily enlarge a portion of your screen, use <u>Magnifier</u> . If neither of these makes the changes you want, you can <u>set a custom</u> <u>scaling level</u> (not recommended). Setting custom levels can lead to unexpected behavior on some displays.		
<u>Change display settings</u> Adjust ClearType text	Change only the text size Instead of changing the size of everything on the desktop, change only the text size for a specific item.		
	Title bars V 9 V Bold		
	Apply		
See also			
Personalization			
Devices and Printers			

• Set the resolution **SLIDE-BAR** to Optimal preset resolution.

Screen Resolution			
← → ∽ ↑ 🗖 > Control Pan	el > All Control Panel Items > Display > Screen Resolution V 🗸	Search Control Panel	Q
File Edit View Tools Help			
	Change the appearance of your display		
	Detect Identify		
	Display: 1. B24 ~		
	Resolution: 1920 × 1080 (Recommended) V		
	Orientation: Landscape ~		
	Advanced setting	IS	
	Make text and other items larger or smaller What display settings should I choose?		
	OK Cancel Apply	l.	

### Windows 8

For Windows 8:

• Right click and click All apps at the bottom-right of the screen.



<b>0</b> •	6	langer -				WordFed	40	Computer
Caundar		altra					٠	
Canona Canona		ipurte	40	Character Mag				Ortsub Programs
Call Decision	a					Magnitor		
finance .					3		2	
Carles -			1			Con-Screen Repticent		
attanet beginne			123	Renote Destop Coreector		Windows Speech Recognition		Text Manager
🖂 Mar							101	
Fill Mars					1		9	Wishing face Transfer
Linuapeq				Steps Records	2		۹	Windows Eary baselier Reports
CO Masc			-			Winitows Performance	2	Windows Four-field
File News			1	Winstown Fair and Scan		Windows Performance.		
Property in								
Picks			0	Windows Made	-			

- Set the "View by" to "Category".
- Click "Appearance and Personalization".



• Click "DISPLAY".

ppearance and Personalization >	~ ¢	Search Control Panel	Q
Personalization         Change the theme       Change dektop background         Change the color of your taskbar and window borders       Change sound effects       Change screen saver         Display       Make text and other items larger or smaller       Adjust screen resolution         Taskbar       Customize icons on the taskbar         Ease of Access Center       Accommodate low vision       Use screen reader       Turn on easy access keys       Turn High Contrast on or off         Folder Options       Specify single- or double-click to open       Show hidden files and folders         Fonts       Preview, delete, or show and hide fonts       Change Font Settings       Adjust ClearType text			
	ppearance and Personalization > Personalization Change theme   Change dektop background   Change the color of your taskbar and window borders   Change sound effects   Change screen saver Display Make text and other items larger or smaller   Adjust screen resolution Taskbar Coustomize icons on the taskbar Ease of Access Center Accommodate low vision   Use screen reader   Turn on easy access keys   Turn High Contrast on or off Folder Options Specify single- or double-click to open   Show hidden files and folders Preview, delete, or show and hide fonts   Change Font Settings   Adjust ClearType text	ppearance and Personalization > v C Personalization Change theme   Change dektop background   Change the color of your taskbar and window borders. Change sound effects   Change screen saver Display Make text and other items larger or smaller   Adjust screen resolution Taskbar Customize icons on the taskbar Ease of Access Center Accommodate low vision   Use screen reader   Turn on easy access keys   Turn High Contrast on or off Folder Options Specify single- or double-click to open   Show hidden files and folders Preview, delete, or show and hide fonts   Change Font Settings   Adjust ClearType text	personalization       Search Control Panel         Personalization       Conseque the knew       Change desktop background       Change sound effects       Change screen saver         Display       Make text and other items larger or smaller       Adjust screen resolution       Taskbar         Customize icons on the taskbar       Ease of Access Center       Accommodate low vision       Use screen reader       Tum on easy access keys       Tum High Contrast on or off         Folder Options       Specify single- or double-click to open       Show hidden files and folders       Fonts         Preview, delete, or show and hide fonts       Change Font Settings       Adjust ClearType text

• Set the resolution SLIDE-BAR to Optimal preset resolution

ă.		Screen Resolution			×
e ⊖ + ↑ 📮 ⊢ Contro	ol Panel + Appearance and Personalization	Display      Screen Resolution		✓ C Search Control Panel	م
	Change the ap		Detect		
	Display: Resolution: Orientation: Make text and othe What display setting	1. PLX2780H V 1920 × 1080 (Recommended) V High 1920 × 1080 (Recommended) 1600 × 900	Advanced settings		
		1024 × 768 Low	OK Cancel Apply		

### Windows 7

### For Windows 7:

- Click START.
- Click "CONTROL PANEL".



• Click "Appearance".

Adjust your computer's settings	oi Panel Items			View by: Small icons *	
Action Center	C Administrative Tools	autoPlay	Backup and Restore		
Color Management	Credential Manager	💣 Date and Time	🕐 Default Programs		
Desktop Gadgets	Jevice Manager	and Devices and Printers	🚆 Display		
Ease of Access Center	Folder Options	Fonts	Getting Started		
	A Indexing Options	Conternet Options	- Keyboard		
Location and Other Sensors	I Mouse	Stewark and Sharing Center	Notification Area lcons		
NVIDIA Control Panel	MVIDIA PhysX	🌲 Parental Controls	/ Pen and Touch		
Performance Information and Tools	Personalization	S Phone and Modern	Power Options		
Programs and Features	Realtek HD Audio Manager	Kecovery	A Region and Language		
RemoteApp and Desktop Connections	Sound	Ø Speech Recognition	( Sync Center		
System	Tablet PC Settings	Taskbar and Start Menu	Troubleshooting		
User Accounts	Sundows Anytime Upgrade	Windows CardSpace	Windows Defender		
Windows Firewall	2 Windows Update				

Click "DISPLAY".

•



• Click on the "Change display settings" button.

🕒 🕘 – 🔍 🕻 Control Panel 1	All Control Panel Items      Display		- 🤧 Search Control Panel 🖇
Control Panel Home Adjust resolution & Calibrate color	Make it easier to read what's or You can change the size of text and other temporarily enlarge just part of the scree	n your screen in terms on your screen by choosing one of these options. To rt, use the <u>Magnifier</u> tool.	
Change display settings Adjust ClearType text	Smaller - 100%	Preview	
Set custom text size (DPI)	Medium - 125% (default)		
	🗇 Larger - 150%		
		Apply	
See also			
Personalization Devices and Printers			

• Set the resolution SLIDE-BAR to Optimal preset resolution

		Screen Resolution			-	
🖷 🛞 💿 🔹 🕆 🜉 k Control Pa	nel > Appearance and Personalization Change the app	Screen Resolution	Detect Identify	× C	Search Control Panel	ρ
	Display: Resolution: Orientation: Make text and other What display setting	1. PLX2780H V 1920 × 1080 (Recommended) V High 1920 × 1080 (Recommended) 1600 × 900	Advanced settings			
		1024 × 768 Low	OK Cancel Apply			

## **Hotkeys**



1	Source/Auto/Exit
2	Dial Point
3	Game Mode/Left
4	Image Ratio/Right
5	Power/ Menu/Enter

#### Power/Menu/Enter

Press the Power button to turn on the monitor.

When there is no OSD, Press to display the OSD or confirm the selection. Press about 2 second to turn off the monitor.

### **Dial Point**

When there is no OSD, press Dial Point button to active Dial Point menu, and then press "Left" or "Right" to set Dial Point on or off.

### Game Mode/Left

When there is no OSD, press "Left" key to open game mode function, then press "Left" or "Right" key to select game mode (FPS, RTS, Racing, Gamer 1, Gamer 2 or Gamer 3) basing on the different game types.

#### Image Ratio/Right

When there is no OSD, press "Right" key to select continuously to change image ratio.

#### Source/Auto/Exit

When the OSD is closed, press Source/Auto/Exit button will be Source hot key function. When the OSD is closed, press Source/Auto/Exit button continuously about 2 second to do auto configure (Only for the models with D-Sub).

# **OSD Setting**

Basic and simple instruction on the control keys.

	Image Setup	Color Setup	Picture Boost	Sg OSD Setup	وتنبی Game Setting	X Extra	Exit
Contrast							
Brightness			DCR ┥				
Eco mode							

- 1) Press the **MENU-button** to activate the OSD window.
- Press< or >to navigate through the functions. Once the desired function is highlighted, press the MENU-button to activate it. press< or >to navigate through the sub-menu functions. Once the desired function is highlighted, press MENU-button to activate it.
- Press< or >to change the settings of the selected function. Press AUTO-button to exit. If you want to adjust any other function, repeat steps 2-3.
- 4) OSD Lock/Unlock Function: To lock or unlock the OSD, press and hold the **Down–button** for 10s while OSD function is not active.

### Notes:

- 1) If the product has only one signal input, the item of "Input Select" is disable to adjust.
- 2) ECO modes (except Standard mode), DCR, DCB mode and Picture Boost, for these four states that only one state can exist.

## Luminance

<>	The setup	Color Setup	Picture Boost	OSD Setup	Game Setting	X Extra	Exit
Contrast							
Brightness			DCR ┥	Off 🕨			
Eco mode							

- 1. Press **MENU-button** to display menu.
- 2. Press Left or Right to select (Luinance), and press **MENU-button** to enter.
- 3. Press Left or Right to select submenu, and press **MENU-button** to enter.
- 4. Press Left or Right to adjust.
- 5. Press **AUTO-button** to exit.

	Contrast	0-100		Contrast from Digital-register.
	Brightness	0-100		Backlight Adjustment
		Standard	>	Standard Mode
		Text	<b>H</b>	Text Mode
	Eco mode	Internet	E	Internet Mode
	Ecomode	Game		Game Mode
		Movie	0	Movie Mode
		Sports	R	Sports Mode
		Gamma1		Adjust to Gamma 1
	Gamma	Gamma2		Adjust to Gamma 2
		Gamma3		Adjust to Gamma 3
		Off		Disable dynamic contrast ratio
	DCR	On	DCR	Enable dynamic contrast ratio

## Image Setup

	Color Setup	Picture Boost	OSD Setup	Game Setting	兴 Extra	Exit	Luminance
Clock	50		Position	50			
Phase	50		Position	50			
Sharpness	50						

- 1. Press **MENU-button** to display menu.
- 2. Press Left or Right to select (Image Setup), and press **MENU-button** to enter.
- 3. Press Left or Right to select submenu, and press **MENU-button** to enter.
- 4. Press Left or Right to adjust.
- 5. Press AUTO-button to exit.

	Clock	0-100	Adjust picture Clock to reduce Vertical-Line noise.
	Phase	0-100	Adjust Picture Phase to reduce Horizontal-Line noise
<b>*</b>	Sharpness	0-100	Adjust picture sharpness
	H. Position	0-100	Adjust the horizontal position of the picture.
	V. Position	0-100	Adjust the vertical position of the picture.

## **Color Setup**

	Picture Boo	Star OSD Setup	Game Setting	X Extra	Exit	- XX- Luminance	Image Setup
Color Temp.				50			
DCB Mode	Off		en 📃	50			
DCB Demo	Off		•	50			

- 1. Press **MENU-button** to display menu.
- 2. Press Left or Right to select (Color Setup), and press **MENU-button** to enter.
- 3. Press Left or Right to select submenu, and press **MENU-button** to enter.
- 4. Press Left or Right to adjust.
- 5. Press **AUTO-button** to exit.

		Warm		Recall Warm Color Temperature from EEPROM.
		Normal		Recall Normal Color Temperature from EEPROM.
		Cool		Recall Cool Color Temperature from EEPROM.
	Color Temp.	sRGB		Recall SRGB Color Temperature from EEPROM.
			Red	Red Gain from Digital-register
		User	Green	Green Gain Digital-register.
			Blue	Blue Gain from Digital-register
		Full Enhance	on or off	Disable or Enable Full Enhance Mode
		Nature Skin	on or off	Disable or Enable Nature Skin Mode
	DCB Mode	Green Field	on or off	Disable or Enable Green Field Mode
		Sky-blue	on or off	Disable or Enable Sky-blue Mode
		AutoDetect	on or off	Disable or Enable AutoDetect Mode
	DCB Demo		On or off	Disable or Enable Demo

## **Picture Boost**

Calendaria		S Setup	Game Setting	× Extra	Exit	Luminance	Image Set	up	Color Setup
Bright Frame Frame Size	•		Brigh Cont	tness arast arast					

- 1. Press **MENU-button** to display menu.
- 2. Press Left or Right to select (Picture Boost), and press **MENU-button** to enter.
- 3. Press Left or Right to select submenu, and press **MENU-button** to enter.
- 4. Press Left or Right to adjust.
- 5. Press **AUTO-button** to exit.

	Bright Frame	on or off	Disable or Enable Bright Frame
	Frame Size	14-100	Adjust Frame Size
	Brightness	0-100	Adjust Frame Brightness
•	Contrast	0-100	Adjust Frame Contrast
	H. position	0-100	Adjust Frame horizontal Position
	V. position	0-100	Adjust Frame vertical Position

#### Note:

Adjust the brightness, contrast, and position of the Bright Frame for better viewing experience.

## **OSD Setup**

< 🚱 >	Game S	<b>9</b> Setting	兴 Extra	Exit	- 🔆 - Luminance	Image Setup	Color Setup	Picture Boos	
Language					_		Transparence		
Timeout									
DP Capability									

- 1. Press **MENU-button** to display menu.
- 2. Press Left or Right to select (OSD Setup), and press **MENU-button** to enter.
- 3. Press Left or Right to select submenu, and press **MENU-button** to enter.
- 4. Press Left or Right to adjust.
- 5. Press **AUTO-button** to exit.

	Language		Select the OSD language
	Timeout	5-120	Adjust the OSD Timeout
	H. Position	0-100	Adjust the horizontal position of OSD
	V. Position	0-100	Adjust the vertical position of OSD
	Transparence	0-100	Adjust the transparence of OSD
	Break Reminder	on or off	Break reminder if the user continuously work for more than 1hrs
	DP Capability	1.1/1.2	please be noted that only DP1.2 support free sync function
	Volume	0-100	Volume Adjustment.

### Notes:

If the DP video content supports DP1.2, please select DP1.2 for DP Capability; otherwise, please select DP1.1

## **Game Setting**

< 🕬 > Gene beling		× Extra	Exit	Luminance	Image	Setup	Color Setup	Picture Boost	SSD Setup
Game Mode		Off				Off			
Shadow Control	-			Overdrive		Off			
Game Color				Dial Point		Off			

- 1. Press **MENU-button** to display menu.
- 2. Press Left or Right to select (Game setting), and press **MENU-button** to enter.
- 3. Press Left or Right to select submenu, and press **MENU-button** to enter.
- 4. Press Left or Right to adjust.
- 5. Press **AUTO-button** to exit.

		FPS	For playing FPS (first Person Shooters) games. Improves dark theme black level details.		
		RTS	For playing RTS (Real Time Strategy). Improves the image quality.		
		Racing	For playing Racing games, Provides fastest response time and high color saturation.		
	Game Mode	Gamer 1	User's preference settings saved as Gamer 1.		
		Gamer 2	User's preference settings saved as Gamer 2.		
		Gamer 3	User's preference settings saved as Gamer 3.		
		off	No optimization by Smart image game		
ن نوب	Shadow Control 0-100		<ul> <li>Shadow Control Default is 50, then end-user can adjust from 50 to 100 or 0 to increase contrast for clear picture.</li> <li>1. If picture is too dark to be saw the detail clearly, adjusting from 50 to100 for clear picture</li> <li>2. If picture is too white to be saw the detail clearly, adjusting from 50 to0 for clear picture</li> </ul>		
•	Game Color	0-20	Game Color will provide 0-20 level for adjusting saturation to get better picture.		
	LowBlue Mode Off/Weak/ Medium/Strong		Decrease blue light wave by controlling color temperature.		
		Weak			
	Quandria	Medium	Adjust the response time		
	Overdrive	Strong			
		Off			
	Dial Point On/Off		The "Dial Point" function places an aiming indicator in the center of screen for helping gamers to play First Person Shooter (FPS) games with an accurate and precise aiming.		

## Extra

< 🔆 >	E	Exit	Luminance	Image Setup	Color Setup	Picture Boost	CSD Setup	Game Setting
Input Select							: 1920(H)X108	
Auto Config.				DDC/CI			cy : 67KHz	
Off Timer								

- 1. Press **MENU-button** to display menu.
- 2. Press Left or Right to select X (Extra), and press **MENU-button** to enter.
- 3. Press Left or Right to select submenu, and press **MENU-button** to enter.
- 4. Press Left or Right to adjust.
- 5. Press AUTO-button to exit.

*	Input Select	AUTO/D-SUB/HDMI1/HDMI2 /DP	Select Input Signal Source	
	Auto Config	yes or no	Auto adjust the picture to default	
	Off timer	0-24hrs	Select DC off time	
	Imaga Datia	Wide	- Select image ratio for display.	
	image Ralio	4:3		
	DDC-CI	yes or no	Turn ON/OFF DDC-CI Support	
	Reset	Yes or no	Reset the menu to default	

Exit

< 🎦	>	Luminance	Image Setup	Color Setup	Picture Boost	OSD Setup	وتینی Game Setting	× Extra

- 1. Press **MENU-button** to display menu.

2. Press Left or Right to select (Exit), and press **MENU-button** to enter.

3. Press AUTO-button to exit.

*	Exit		Exit the main OSD
---	------	--	-------------------

# **LED Indicator**

Status	LED Color
Full Power Mode	White
Active-off Mode	Orange

# Driver

# **Monitor Driver**

## Windows 10

- Start Windows® 10
- Right click START.
- Click "Control Panel".



Click on the "Display" icon.

•



• Click on the "Change display settings" button



#### • Click the "Advanced Settings" button.

Screen Resolution				-	
← → × ↑ 🗔 > Control Pan File Edit View Tools Help	el > All Control Panel Items	> Display > Screen Resolution	~ Č	Search Control Panel	م
	Change the appeara	nce of your display	Detect		
	Display: 1. B24 Resolution: 1920 × Orientation: Lands:	x 1080 (Recommended)			
	Make text and other items What display settings shou	larger or smaller Ild I choose?			
			OK Cancel Apply		

• Click the "Monitor" tab and then click the "Properties" button.



• Click the "Driver" tab.

eneral Dr	ver Details			
<b>N</b> 0	eneric PnP Mo	nitor		
0	river Provider.	Microsoft		
0	viver Date:	6/21/2006		
0	viver Version:	6.1.7600.16385		
0	igital Signer.	Microsoft Windows		
Driver	Details	To view details about the driver files.		
Update	Driver	To update the driver software for this device.		
Roll Ba	sk Driver	If the device fails after updating the driver, roll to the previously installed driver.	back	
Disable Uninstall		Disables the selected device.		
		To uninstall the driver (Advanced).		
			-	

• Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver... "and then

click the "Browse my computer for driver software" button.



• Select "Let me pick from a list of device drivers on my computer".



• Click the **"Have Disk"** button. Click on the **"Browse"** button and navigate to the following directory: X:\Driver\module name(where X is the drive letter designator for the CD-ROM drive).

Install Fro	t the manufacturer and model of your hardware device a m Disk	and then click Next
9	Insert the manufacturer's installation disk, and then make sure that the correct drive is selected below.	OK Cancel
	Copy manufacturer's files from: F:\Drivers\e936Vw	Browse

- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk drive.
- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

## Windows 8

- Start Windows® 8
- Right click and click **All apps** at the bottom-right of the screen.



- Click on the "Control Panel" icon
- Set the "View by" to "Large icons" or "Small icons".

		All Control Pane	ś items		- 5
👔 — 🕇 🐺 + Control Panel +	All Control Fanel Barna			* 6	Gearch Cerebral Parvet
ldjust your computer's settings				3	ter by Largi nami *
Action Center	Administrative Tools	AutoPlay	🍂 BitLocker Drive Encryption	Color Management	Large locers Small icons
Credential Manager	Date and Time	Default Programs	Device Manager	Big Devices and Printers	
Display	G Ease of Access Center	👪 Family Salety	File History	Flash Player (32-bit)	
Folder Options	Forts	HomeGroup	A Indexing Options	Internet Options	
C Keyboard	Tanguage	Location Settings	J Mouse	Metwork and Sharing Center	
Notification Area Icons	NVIDIA Control Panel	Performance information and Tools	Personalization	Phone and Modern	
Power Options	Programs and Features	Recovery	🔗 Region	RemoteApp and Desktop	
Sound	B Speech Recognition	Storage Spaces	Sync Center	System	
Taskbar	Troubleshooting	Liser Accounts	Windows 7 File Recovery	Windows Defender	
Windows Firewall	Windows Update				

1111PM
9 10 W 10/25/002

Click on the "Display" icon.

٠

Biog + He + Control Panet + All Control	or Panel Berns A			- Are Search Cardiol Falset	- 1
Adjust your computer's settings				View by: Small looes *	
Action Center	() Administrative Tools	Ký AutoPlay	He Backup and Restore		
Color Management	E Credential Manager	off Date and Time	Erlaut Programs		
Desitop Gadgets	Device Manager	mg Devices and Printers	Ciscley		
Ease of Access Center	Folder Options	A Forms	Getting Started		
& HomeGroup	As bidewing Options	C Internet Options	🗢 Kryboard		
Location and Other Servors	J Mouse	Detwork and Sharing Center	Notification Area Scone		
NVIDUA Control Parset	NVIDIA Physik	A Parevital Controls	/ Pen and Touch		
Performance Information and Tools	Tersonalization	A Prone and Modern	Power Options		
Trograms and Features	2 Realtek HD Audio Manager	🛋 Recovery	A Region and Language		
RemoteApp and Desitop Connections	(P. Sound	Ø Speech Recognition	Sync Center		
System	Tanier PC Serrings	1 Talabar and Start Menu	Troublesholding		
User Accounts	A Windows Anytime Upgrade	Windows CardSpace	Mindows Defender		
Windows Frewall	Windows Lipdata				
Windows Ferwall	Windows Update				

• Click on the "Change display settings" button.

🕒 🕥 - 🕅 + Corenii Panel +	All Control Panel Items + Display		• • Sweet Correct Paral
Control Panel Home Adjust resolution Collegate color Charge dosmy settings Adjust Clear Type set Set custom test like (DPI)	Make it easier to read what's o Tou can durge the use of het and off rencontry enarge patient of the som Sinder 1995 @ Mottum - 1256 (setaur) © Larger - 1595	n your screen by choosing one of here options. To in one on your screen by choosing one of here options. To in use the lagstime tool.	
See sloo Personalization Devices and Printers			

• Click the "Advanced Settings" button.

😧 🕢 = 🔍 • Comoi Panei • All Comoi Panei Items • Display • Screen Resolution	• 😽 Search Caroby/ Paner P.
Change the appearance of your display	
I O I I I I I I I I I I I I I I I I I I	1
Dispray Andreas Detault Flat Farm • Personal Control State S	
Advanced units	ф.
Maile test and cobe items larger or smaller While display antings include Chacket	
OK Arroly	

• Click the "Monitor" tab and then click the "Properties" button.

Gener	ric PnP Monitor
	Properties
Monitor Settings	5
Screen refresh	rate:
60 Hertz	•
Clearing this ch cannot display damaged hard	is that the individual cannot depray the deck box allows you to safet display modes that this monitor correctly. This may lead to an unusable display and/or ware.
Colors:	bin 👻
Colors: True Color (32	uų .
Colors: True Color (32	ony -
Colors: True Color (32	in the second seco

• Click the "Driver" tab.



• Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver..."and then

click the "Browse my computer for driver software" button.



Select "Let me pick from a list of device drivers on my computer".



•

• Click the "Have Disk" button. Click on the "Browse" button and navigate to the following directory:

X:\Driver\module name (where X is the drive letter designator for the CD-ROM drive).

Select stall From	the manufacturer and model of your hardware device an n Disk	d then click h
-	Insert the manufacture's installation disk, and then make sure that the correct drive is selected below.	OK Cancel
	Copy manufacturer's files from:	
	F:\Drivers\e936Vw	Browse

- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk drive.
- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

## Windows 7

- Start Windows® 7
- Click on the "Start" button and then click on "Control Panel".



• Click on the "Display"icon.

🕢 - 📪 🕨 Cantrol Panel 🕨 All Contro	ci Panel Berns +			44 Seach Carero Feat
djust your computer's settings				View by: Small icons *
Action Center	C Administrative Tools	Ký AutoPhay	He Backup and Restore	
Color Management	E Crederbial Manager	all Date and Time	e Defaut Programs	
Deatop Gadgets	Device Manager	wig Devices and Printers	Ciscley	
Ease of Access Center	E Folder Curtions	A Fores	3 Getting Started	
& HomeGroup	A Intering Options	🐑 Internet Options	- Kryboard	
Location and Other Sereors	J Mouse	Network and Sharing Center	Notification Area Score	
NVIDUA Control Parset	NVIDIA Physik	A Parental Controls	/ Pen and Touch	
Performance Information and Tools	Tersonalization	A Phone and Modern	Power Options	
Trograms and Features	2 Reattek HD Audio Manager	🛋 Recovery	A Region and Language	
RemoteApp and Desitop Connections	(P. Sound	Ø Speech Recognition	😁 Sync Center	
System	Tanim IC Semisgi	Talabar and Start Menu	Troublesholding	
User Accounts	A Windows Anytime Upgrade	Windows CardSpace	Ill Windows Defender	
Windows Firewall	💐 Windows Lipdate			

• Click on the "Change display settings" button.

🚱 🕥 - 🔍 🕈 Control Panel 🔸	All Control Panel Items + Display		+ + Surre Come And
Control Panel Home Adjust resolution Calibrate color Checker durings settings Adjust Crawfures text	Make it easier to read what's or You can change the size of text and other temporarily enlarge just part of the scree © Smaker 500%	n yolur screen Hens on yoor soven by choosing one of these options. To is use the Magnifer tool. Provides	
Set custom text size (DPI)	a Messuw - 125% (defauto © Larger - 150%		
		Acon	
See also			
Devices and Printers			

• Click the "Advanced Settings" button.

Change the appearance of your display		
. 0	Detect Identify	
Display 3. Needla Default flat Panel. •		
Resolution: [1928 + 1080 (recommended) • Orientation: Landscape •		
Make text and other items larger or smaller What display settings through Ecology?	Advanced settings	
os a	Apply	
While digities withings throad ( indose?	Apply	

• Click the "Monitor" tab and then click the "Properties" button.



Click the "Driver" tab.

•



 Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver... "and then click the "Browse my computer for driver software" button.



• Select "Let me pick from a list of device drivers on my computer".



• Click the "Have Disk" button. Click on the "Browse" button and navigate to the following directory:

X:\Driver\module name(where X is the drive letter designator for the CD-ROM drive).



- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk

drive.

- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

# i-Menu



Welcome to "i-Menu" software by AOC. i-Menu makes it easy to adjust your monitor display setting by using on screen menus instead of the OSD button on the monitor. To complete installation, please follow the installation guide. The software Supported operating systems: Windows 10, Windows 8, Windows 7.



## e-Saver



Welcome to use AOC e-Saver monitor power management software! The AOC e-Saver features Smart Shutdown functions for your monitors, allows your monitor to timely shutdown when PC unit is at any status (On, Off, Sleep or Screen Saver); the actual shutdown time depends on your preferences (see example below). Please click on "driver/e-Saver/setup.exe" to start installing the e-Saver software, follow the install wizard to complete software installation.

Under each of the four PC status, you may choose from the pull-down menu the desired time (in minutes) you're your monitor to automatically shut down. The example above illustrated:

- 1) The monitor will never shutdown when the PC is powered on.
- 2) The monitor will automatically shutdown 5 minutes after the PC is powered off.
- 3) The monitor will automatically shutdown 10 minutes after the PC is in sleep/stand-by mode.
- 4) The monitor will automatically shutdown 20 minutes after the screen saver appears.



You can click "RESET" to set the e-Saver to its default settings like below.



## Screen+



Welcome to "Screen+" software by AOC. Screen+ software is a desktop screen splitting tool; it splits the desktop into different panels, and each panel displays a different window. You only need to drag the window to a corresponding panel when you want to access it. It supports multiple monitor display to make your task easier. Please follow the installation software to install it. The software Supported operating systems: Windows 10, Windows 8,Windows 7.



# Troubleshoot

Problem & Question	Possible Solutions
Power LED Is Not ON	Make sure the power button is ON and the Power Cord is properly connected to a grounded power outlet and to the monitor.
No images on the screen	<ul> <li>Is the power cord connected properly? Check the power cord connection and power supply.</li> <li>Is the cable connected correctly? (Connected using the D-sub cable) Check the DB-15 cable connection. (Connected using the DVI cable) Check the DVI cable connection.</li> <li>* DVI input is not available on every model.</li> <li>If the power is on, reboot the computer to see the initial screen (the login screen), which can be seen.</li> <li>If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows ME/XP/2000) and then change the frequency of the video card.</li> <li>(Refer to the Setting the Optimal Resolution)</li> <li>If the initial screen (the login screen) does not appear, contact the Service Center or your dealer.</li> <li>Can you see "Input Not Supported" on the screen? You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly.</li> <li>Adjust the maximum resolution and frequency that the monitor can handle properly.</li> </ul>
Picture Is Fuzzy & Has Ghosting Shadowing Problem	Adjust the Contrast and Brightness Controls. Press to auto adjust. Make sure you are not using an extension cable or switch box. We recommend plugging the monitor directly to the video card output connector on the back.
Picture Bounces, Flickers Or Wave Pattern Appears In The Picture	Move electrical devices that may cause electrical interference as far away from the monitor as possible. Use the maximum refresh rate your monitor is capable of at the resolution you are using.
Monitor Is Stuck In Active Off-Mode"	The Computer Power Switch should be in the ON position. The Computer Video Card should be snugly fitted in its slot. Make sure the monitor's video cable is properly connected to the computer. Inspect the monitor's video cable and make sure no pin is bent. Make sure your computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.
Missing one of the primary colors (RED, GREEN, or BLUE)	Inspect the monitor's video cable and make sure that no pin is damaged. Make sure the monitor's video cable is properly connected to the computer.
Screen image is not centered or sized properly	Adjust H-Position and V-Position or press hot-key (AUTO).
Picture has color defects (white does not look white)	Adjust RGB color or select desired color temperature.
Horizontal or vertical disturbances on the screen	Use Windows 95/98/2000/ME/XP shut-down mode to adjust CLOCK and FOCUS. Press to auto-adjust.

# **Specification**

# **General Specification**

	Model name	G2590VXQ		
	Driving system	TFT Color LCD		
	Viewable Image Size	24.5 inch, 62.228 cm dia	gonal	
Panel	Pixel pitch	0.2832mm(H) x 0.2802m	m(V)	
	Video	R, G, B Analog Interface	& HDMI Interface &	DP Interface
	Separate Sync.	H/V TTL		
	Display Color	16.7M Colors		
	Horizontal scan range	30k~83kHz(D-SUB) 30k~85kHz(HDMI1.4) 85kHz(DP)		
	Horizontal scan Size(Maximum)	543.744mm		
	Vertical scan range	50~76Hz(D-SUB) 30~76Hz(HDMI1.4/DP)		
	Vertical Scan Size(Maximum)	302.616mm		
	Optimal preset resolution	1920x1080@60Hz(D-SUB) 1920 x1080@75Hz (HDMI/DP)		
Others	Plug & Play	VESA DDC2B/CI		
Others	Input Connector	VGA /HDMI/DP/Audio input		
	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM, TMDS		
	Output Connector	Earphone out		
	Power Source	100-240V~,50/60Hz		
		Typical(Brightness = 90,0	20W	
	Power Consumption	Max. (brightness = 100, o	≪30W	
		Power saving	≪0.5W	
	Off timer	0~24 hrs		
	Speakers	2W*2		
	Connector Type	VGA\ HDMI\DP\Earphone out\Line In		
	Signal Cable Type	Detachable		
Dhumingl	Dimensions & Weight:			
Physical Characteristics	Height(with Base)	419.8mm		
	Width	558.6mm		
	Depth	179.5mm		
	Weight(Monitor only)	4.2Kg	1	
	Temperature	Operating	0°~ 40°	
		Non-Operating	-25°~ 55°	
Environmental	Humidity	Operating	10% ~ 85% (non	-condensing)
	······································	Non-Operating	5% ~ 93% (non-	condensing)
	Altitude	Operating	0~ 5000 m (0~ 1	6404ft)
		Non-Operating	0~ 12192m (0~ 4	10000ft )

# Preset Display Modes

STANDARD	RESOLUTION	HORIZONTAL FREQUENCY(kHZ)	VERTICAL FREQUENCY(Hz)	SOURCE
	640x480@60Hz	31.469	59.94	ALL
	640x480@72Hz	37.861	72.809	ALL
VGA	640x480@75Hz	37.5	75	ALL
Vert	640x480@67Hz	35	66.667	ALL
	640x480@100Hz	51.08	99.769	ALL
	640x480@120Hz	61.91	119.518	ALL
Dos	720x400@70Hz	31.469	70.087	ALL
	800x600@56Hz	35.156	56.25	ALL
	800x600@60Hz	37.879	60.317	ALL
SVGA	800x600@72Hz	48.077	72.188	ALL
	800x600@75Hz	46.875	75	ALL
	800x600@100Hz	63.68	99.662	ALL
	800x600@120Hz	77.43	119.854	ALL
	1024x768@60Hz	48.363	60.004	ALL
	1024x768@70Hz	56.476	70.069	ALL
XGA	1024x768@75Hz	60.023	75.029	ALL
	1024x768@100Hz	81.58	99.972	ALL
	1024x768@120Hz	98.96	119.804	ALL
SXGA	1280x1024@60Hz	63.981	60.02	ALL
Under t	1280x1024@75Hz	79.976	75.025	ALL
Full HD	1920x1080@60Hz	67.5	60	ALL
	1920x1080@75Hz	83.894	74.973	HDMI/DP

# **Pin Assignments**



## 15-Pin Color Display Signal Cable

Pin Number	15-Pin Side of the Signal Cable	Pin Number	15-Pin Side of the Signal Cable
1	Video-Red	9	+5V
2	Video-Green	10	Ground
3	Video-Blue	11	N.C.
4	N.C.	12	DDC-Serial data
5	Detect Cable	13	H-sync
6	GND-R	14	V-sync
7	GND-G	15	DDC-Serial clock
8	GND-B		



Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1.	TMDS Data 2+	9.	TMDS Data 0-	17.	DDC/CEC Ground
2.	TMDS Data 2 Shield	10.	TMDS Clock +	18.	+5V Power
3.	TMDS Data 2-	11.	TMDS Clock Shield	19.	Hot Plug Detect
4.	TMDS Data 1+	12.	TMDS Clock-		
5.	TMDS Data 1Shield	13.	CEC		
6.	TMDS Data 1-	14.	Reserved (N.C. on device)		
7.	TMDS Data 0+	15.	SCL		
8.	TMDS Data 0 Shield	16.	SDA		



## 20-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name
1	ML_Lane 3 (n)	11	GND
2	GND	12	ML_Lane 0 (p)
3	ML_Lane 3 (p)	13	CONFIG1
4	ML_Lane 2 (n)	14	CONFIG2
5	GND	15	AUX_CH(p)
6	ML_Lane 2 (p)	16	GND
7	ML_Lane 1 (n)	17	AUX_CH(n)
8	GND	18	Hot Plug Detect
9	ML_Lane 1 (p)	19	Return DP_PWR
10	ML_Lane 0 (n)	20	DP_PWR

# **Plug and Play**

### Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.

# **WEEE Declaration**

Disposal of Waste Equipment by Users in Private Household in the European Union.



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

# Regulation

# **FCC Notice**

### FCC Class B Radio Frequency Interference Statement WARNING: (FOR FCC CERTIFIED MODELS)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

### NOTICE:

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference. It is the responsibility of the user to correct such interference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **Restriction on Hazardous Substances statement (India)**

This product complies with the "E-Waste (Management) Rules, 2016" CHAPTER V, rule 16, sub-rule (1) . Whereas New Electrical and Electronic Equipment and their components or consumables or parts or spares do not contain Lead, Mercury, Cadmium, Hexavalent Chromium, polybrominated biphenyls and polybrominated diphenyl ethers beyond a maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers and of 0.01% by weight in homogenous materials for cadmium. except of exemptions set in Schedule 2 of the Rule.

## **E-Waste Declaration for India**



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment .The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about E -waste please visit http://www.aocindia.com/ewaste.php and to know where you can drop off your waste equipment for recycling in India please contact on below given contact details.

Helpline number: 080-6788-6788 / 080-3323-1313 (Monday to Saturday, 10 a.m. to 6 p.m.)

Centralized E-waste collection center

Address: TPV Technology India Private Limited, 59, Maheswari Nagar, 1st Main Road, Mahadevapura Post,Whitefield Road,Bangalore,Karnataka,PIN:560048, Tel: 080-6788-6799

E-mail: <a href="mailto:serviceindia@aoc.com">serviceindia@aoc.com</a>

# Service

# Warranty Statement for Europe

### LIMITED THREE-YEAR WARRANTY\*

For AOC LCD Monitors sold within Europe, AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of Three (3) years after the original date of consumer purchase. During this period, AOC International (Europe) B.V. will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. In the absent of the proof of purchase, the warranty will start 3 months after the date of manufacturing indicated on the product.

If the product appears to be defective, please contact your local dealer or refer to the service and support section on <u>www.aoc-europe.com</u> for the warranty instructions in your country. The freight cost for the warranty is pre-paid by AOC for the delivery and return. Please ensure you provide a dated proof of purchase along with the product and deliver to the AOC Certified or Authorized Service Center under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

AOC International (Europe) B.V. will pay the return shipping charges within one of the countries specified within this warranty statement. AOC International (Europe) B.V. is not responsible for any costs associated with the transportation of product across international borders. This includes the international border within the European Union. If the LCD Monitor is not available for collection when the currier attends, you will be charged a collection fee.

\* This limited warranty does not cover any losses or damages that occur as a result of:

- Damages during transport due to improper packaging
- Improper installation or maintenance other then in accordance with AOC's user manual
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or Authorized Service Center
- Improper environments like humidity, water damage and dusts
- Damaged by violence, earthquake and terrorist attacks
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have

modified or altered; you bear the sole responsibility and liability for any such modifications or alteration.

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

If your warranty has expired, you still have access to all available service options, but you will be responsible for the cost of service, including parts, labor, shipping (if any) and applicable taxes. AOC Certified or Authorized Service Center will provide you with an estimate of service costs before receiving your authorization to perform service.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more information, please visit: <a href="http://www.aoc-europe.com">http://www.aoc-europe.com</a>

# Warranty Statement for Middle East and Africa (MEA)

## And

## The Commonwealth of Independent States (CIS)

### LIMITED ONE to THREE YEARS WARRANTY\*

For AOC LCD Monitors sold within the Middle East and Africa (MEA) and the Commonwealth of Independent States (CIS), AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of One (1) to Three (3) years from the manufacture date depending on sale country. During this period, AOC International (Europe) B.V. offers a Carry-In (return to Service Center)Warranty Support at an AOC's Authorized Service Center or Dealer and at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. As a Standard Policy, the warranty will be calculated from the manufacture date identified from the product ID serial number, but the total warranty will be Fifteen (15) months to Thirty Nine (39) months from MFD (manufacture date) depending on sale country. Warranty will be considered for exceptional cases that are out of warranty as per the product ID serial number and for such exceptional cases; Original Invoice/Proof Of Purchase Receipt is mandatory.

If the product appears to be defective, please contact your AOC authorized dealer or refer to the service and support section on AOC's website for the warranty instructions in your country:

- Egypt: <u>http://aocmonitorap.com/egypt\_eng</u>
- CIS Central Asia: <u>http://aocmonitorap.com/ciscentral</u>
- Middle East: <u>http://aocmonitorap.com/middleeast</u>
- South Africa: <u>http://aocmonitorap.com/southafrica</u>
- Saudi Arabia: <u>http://aocmonitorap.com/saudiarabia</u>

Please ensure you provide a dated proof of purchase along with the product and deliver to the AOC Authorized Service Center or Dealer under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

### \* This limited warranty does not cover any losses or damages that occur as a result of:

- Damages during transport due to improper packaging
- Improper installation or maintenance other then in accordance with AOC's user manual
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or

Authorized Service Center

- Improper environments like humidity, water damage and dusts
- Damaged by violence, earthquakes and terrorist attacks
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modifications or alteration.

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

If your warranty has expired, you still have access to all available service options, but you will be responsible for the cost of service, including parts, labor, shipping (if any) and applicable taxes. AOC Certified, Authorized Service Center or dealer will provide you with an estimate of service costs before receiving your authorization to perform service.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF ONE (1) to THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more information, please visit: <a href="http://www.aocmonitorap.com">http://www.aocmonitorap.com</a>



AOC International (Europe) B.V. Prins Bernhardplein 200 / 6<sup>th</sup> floor, Amsterdam, The Netherlands Tel: +31 (0)20 504 6962 • Fax: +31 (0)20 5046933

# AOC PIXEL POLICY ISO 9241-307 CLASS 1

July 25<sup>th</sup>, 2013

AOC strives to deliver the highest quality products. We use some of the industry's most advanced manufacturing processes and practice stringent quality control. However, pixel or sub pixel defects on the TFT monitor panels used in flat panel monitors are sometimes unavoidable. No manufacturer can guarantee that all panels will be free from pixel defects, but AOC guarantees that any monitor with an unacceptable number of defects will be repaired or replaced under warranty. This Pixel Policy explains the different types of pixel defects and defines acceptable defect levels for each type. In order to qualify for repair or replacement under warranty, the number of pixel defects on a TFT monitor panel must exceed these acceptable levels.

### **Pixels and Sub Pixel Definition**

A pixel, or picture element, is composed of three sub pixels in the primary colors of red, green and blue. When all sub pixels of pixel are lit, the three colored sub pixel together appear as a single white pixel. When all are dark, the three colored sub pixels together appear as a single black pixel.



### **Types of Pixel Defects**

- Bright Dot Defects: the monitor displays a dark pattern, sub pixels or pixels are always lit or "on"
- Black Dot Defects: the monitor displays a light pattern, sub pixels or pixels are always dark or "off".

ISO 9241-307	Defect Type	Defect Type 2	Defect Type 3	Defect Ty	pe 4
Pixel Defect Class	1Bright Pixel	Black Pixel	Bright Sub pixel	Black Sub	pixel
			2	+ 1	
Classe 1	1	1	1	+ 3	
			0	+ 5	

AOC International (Europe) B.V.

# Warranty Statement for North & South America (excluding Brazil)

## WARRANTY STATEMENT

For AOC Color Monitors

Including those Sold within North America as Specified

Envision Peripherals, Inc. warrants this product to be free from defects in material and workmanship for a period of three (3) years for parts & labor, one (1) year for the LCD panel, after the original date of consumer purchase. During this period, EPI (Envision Peripherals, Inc.) will, at its discretion, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as stated below.\* The parts or product that are replaced become the property of EPI.

In the USA, to obtain service under this limited warranty first call EPI for the name of the Authorized Service Center closest to your area. Then deliver the product freight pre-paid, along with the dated proof of purchase, to the EPI Authorized Service Center. If you cannot deliver the product in person, please ship the product using the following guidelines:

- Pack it in its original shipping container (or equivalent)
- Put the RMA number on the address label
- Put the RMA number on the shipping carton
- Insure it (or assume the risk of loss / damage during shipment)
- Pay all shipping charges

EPI is not responsible for damage to inbound product that were not properly packaged. EPI will pay the return shipping charges within one of the countries specified within this warranty statement. EPI is not responsible for any costs associated with the transportation of product across international borders. This includes the international borders of the countries within this warranty statement.

In the United States and Canada contact your Dealer or EPI Customer Service, RMA Department at the toll free number (888) 838-6388. Or you can request an RMA Number online at http://us.aoc.com/contact\_support.php.

\*This limited warranty does not cover any losses or damages that occur as a result of:

- Any cause other than ordinary commercial or industrial application
- Repair, adjustment, modification, or installation of options or parts by anyone other than an EPI Authorized Service Center
- Storage or use in improper environments including excessive or inadequate heating or cooling
- Electrical power failures, surges, or other electrical irregularities
- Shipping damage from store to end user or from end user to AOC authorized service center
- Improper handling or installation
- Acts of God, fire, earthquake, accident, or other unintentional activities
- Product Scratches, cosmetic damage, panel cell crack, or other physical damage

Furthermore, this limited warranty does not cover any losses or damages under the following conditions:

- Product has been opened by anyone other than an EPI Authorized Service Center
- Product was purchased from any party other than an authorized reseller
- The date on proof of purchase receipt is invalid
- Product is out of warranty period

This three-year limited warranty does not cover any of the product's firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modification or alteration.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR AND ONE (1) YEAR FOR LCD PANEL FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

EPI OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCLUSIVELY AS STATED HERE. EPI' LIABILITY, WHETHER BASED ON CONTRACT, TORT. WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL ENVISION PERIPHERALS, INC. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

In the United States of America, this limited warranty is only valid for Products purchased in the Continental United States, Alaska, and Hawaii. Outside the United States of America, this limited warranty is only valid for Products purchased in Canada. For Service in South America, refer to the SA Service Center List included with the product.

# Warranty Statement for India

Thank you for choosing AOC. We realize that you had other options and chose to trust AOC. We will try our best to live up to our promises and exceed your expectations.

TPV India Technology India Pvt. Ltd. warrants this product to be free from defects in material and workmanship for a period of three years from the date of purchase.

Our products are designed and manufactured to avoid any defects. But if something goes wrong, we are prepared to take care of the inconvenience it would cause you. In life, things do go wrong. But what matters is how we handle those failures.

### How you could register a new service

### request?

Please write to us with your product details like model number, serial number, the problem you face and your address and contact numbers.

### Email:

### serviceindia@aoc.co

m

Else you could also call us on our helpline numbers given below:

#### 080-6788-6788 or 080-3323-1313 (10 a.m. and 6 p.m., Mondays to Saturdays except public holidays)

You could also send a text message 'AOC' to 56677 and we would call you back within 4 working hours.

#### How are we prepared to serve you?

We keep our spare parts ready and near to you, to minimize any delay in providing repair services. We have most of our spare parts kept in following cities to take care of customers in respective or nearby states.

North India: Delhi, Lucknow, Chandigarh and Jaipur

East India: Kolkata, Guwahati, Bhubaneshwar and Patna

West India: Mumbai, Ahmedabad, Indore and Raipur

South India: Chennai, Bangalore, Hyderabad and Cochin

If a service request is registered through our contact center by 12 p.m., we would dispatch the spare part required (based on the problem reported by you) on the same day, to our authorized service center near to you. Within few days (depending on distance from your place to our service center) of delivery of spare part at a service center, our technician would visit your place and try to resolve the problem. There are rare chances that some of the parts are readily not available at our regional warehouses mentioned above, or another spare part is required to be dispatched from our central spare parts warehouse at Bangalore. Such cases would require an additional time in resolution of service request.

### What is the warranty period for your AOC monitor?

The standard warranty period for AOC monitors is three years from the date you purchased. While our technician visits your place, the invoice needs to be presented. If you are unable to show the invoice, it would be considered that the product is not under the warranty period and hence the visit charges, depending on the distance from our authorized service center to your place, need to be paid to our technician. Also, if any spare part is used for repair, the corresponding cost also need to be paid.

## What are the terms and conditions of the warranty?

- 1. Warranty is confined to the first purchaser of the product and is non-transferable.
- 2. Warranty is applicable only on producing the purchase tax invoice which mentions the product name and serial number.
- 3. During the warranty period, the product will only be repaired by replacing the parts. Entire unit replacement may be done in such a scenario where there are no spares available / model is discontinued.
- 4. In case the replacement of the entire unit is being made (subject to the sole discretion of the Company), the same model shall be replaced and in the event such model has been discontinued, it shall be replaced with a model equivalent as deemed by the Company. The warranty on replacement model shall remain in force only for the unexpired period of the warranty based on original purchase tax invoice.
- 5. In the event of repairs/replacement of any part/s of the unit, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty. Moreover, the time taken for repair/replacement and in transit whether under the warranty or otherwise shall not be excluded from the warranty period.
- 6. The company or its authorized service center, reserves the right to retain any part/s or component/s replaced at its discretion in the event of a defect noticed in the equipment during the warranty period. The part/s or component/s or unit/s replaced will become the property of the company.
- 7. The company's obligation under this warranty shall be limited to repair or providing replacement of part/s only. This warranty shall not cover any consequential or resulting liability, damage or loss to property or life arising directly or indirectly out of any defect in the product. The maximum claim/s if entertained by the company will be subject to the maximum retail price of the product purchased or amount mentioned in the purchase invoice, whichever is lower.
- 8. In the event of any unforeseen circumstance, and spares not being available, the company's prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.
- 9. The warranty does not cover any accessories external to the equipment like the cables, remote control, batteries, base / stand, adaptors, 3D glasses, clip-on glasses, etc.
- 10. The warranty will automatically terminate on the expiry of the warranty period, even if the product may not be in use for any time during the warranty period for any reason.

## What is not covered under the standard warranty?

The standard warranty is not applicable

- 1. If the serial number of the product is tampered
- 2. If any unauthorized person has opened the product or tried for repairs
- 3. If the original purchase invoice is not shown to the authorized technician upon request.
- 4. If the defect is caused due to high humid environment or the product is not used according to the instructions given in user manual.
- 5. If the defects are caused due to improper use or handling of the product as determined by our authorized technician/ representative.
- 6. If the defects are caused due to reasons beyond our control like lightening, fire, abnormal voltage spike, electrical short circuit, improper grounding, floods, earthquakes, terrorism or any act of God
- 7. For defects caused due to normal wear and tear such as scratches on the body of the product, colour fading etc.
- 8. For any user induced damages, physical damages, damages to the liquid crystals on the panel, defects caused due to liquid spillage such as air bubbles (commonly called as black spot on screen), patches or mura effect due to uneven external pressure on the panel, dust inside the panel, defects arising due to modification or alteration of any nature made in the electrical circuitry or physical construction of the product.
- 9. For pixel defects within acceptable levels. Up to 3 bright pixels (dots) or up to 3 dark pixels or a combination of 5 pixels is not considered as a defect.

Note: Any dispute related to warranty of the product is subjected to exclusive jurisdiction of the courts at New Delhi.

### How to clean the monitor?

Turn off the monitor first. Gently wipe away any dust on the computer monitor using a very soft cloth. Wipe the flat screen as softly as possible, starting at one side and swiping straight across. Do not rub the flat screen in a circular or up and down motion, as this could scratch the flat screen. Do not try to wipe away any streaks, spots or grime with

the dry cloth either. The purpose of this step is simply to wipe off as much dust as possible.

When you are done dusting, moisten a special cleaning cloth or tool, or another clean, soft cloth with special liquid cleaner for flat screens, distilled water, or a mixture of white vinegar and distilled water. Do not spray or pour any type of cleaner directly onto the computer monitor. Doing so could cause the liquid to drip down inside of the flat screen, causing irreparable damage. Instead, spray the cleaner onto the cloth or dip the cloth into the liquid. Again, try not to press too hard on the flat screen as you clean it. Pressing into the screen can cause permanent damage. Wipe the dampened cloth gently from side to side or from top to bottom. Make sure the computer monitor is completely dry before you turn it back on.

When the liquid drips down/ gets accumulated near the sides/ corners, it causes the metal frame of the LCD panel to corrode thereby causing gaps through which air rushes inside the two glass plates inside the panel. This makes crystals of the LCD (Liquid Crystal Display – Crystals with some electric properties floating in a liquid medium) to dislocate and appear to us as air bubbles (or black spots as commonly called) inside the panel. Such defects are not covered under the standard warranty.

### Our services haven't met your expectations? Share your feedback to our Service Head

If we haven't been able to meet your expectations or you would like share a feedback or suggestion to our Service Head, please write an email to <u>india@aoc-support.com</u>. If your feedback is related to a service request, please mention the 12 digit Service Job Number in your email.

# EASE PROGRAME



Only for AOC branded monitors sold within the continental United States.

All AOC branded monitors are now covered by the EASE Program. If your monitor malfunctions at any time during the first three months, AOC will provide a replacement monitor within 72 hours after you are approved for our program. If your monitor qualifies for the EASE program, AOC will pay for freight both ways.

Step 1: Phone our TECH Department at 888.662.9888

Step 2: Fill out and return EASE registration forms by mail or fax.

Step 3: We will issue a Return Authorization Number upon verification into the program.

**Step 4:** A monitor will be advance shipped to your location.

Step 5: We will issue a UPS Call Tag to pick up the defective unit.

Step 6: Please review the following chart to see your EASE program qualifications.

WARRANTY	COVERAGE AT	CUSTOMER	
PERIOD	NO CHARGE	CHARGES	
Within the first three months of	- New AOC monitor		
within the first three months of	- Call tag dispatched and return	- None*	
purchase: Covered by EASE	freightcharges via UPS		
Detrucer America 1 Veen	- All Parts & Labor Including CRT	- UPS Return Freight to AOC	
between 4 months – 1 Tear	Tube & LCD Panel		
Between 1 Year - 3 Years: Covered	- Parts & Labor (excluding CRT Tube	- UPS Return Freight to AOC	
by standard limited warranty	& LCD Panel)		

\*AOC will need to obtain a credit card number if you would like to get a new AOC monitor advanced shipped to your location, prior to the defective unit arriving at AOC's service center. If you do not wish to supply a credit card, AOC will only ship the new monitor, once the defective unit arrives at the AOC service center.

