# ЛОС

## LCD Monitor User Manual

E2070Swn / E2070 Swnl

(LED Backlight)



National Conventions.       3         Power       4         Installation       5         Cleaning.       6         Other.       7         Setup       8         Contents of Box       8         Setup Stand       9         Adjusting Viewing Angle.       10         Connecting the Monitor.       11         Wall Mounting       12         Adjusting Optimal Resolution       13         Windows 10       13         Windows 8       15
Installation5Cleaning6Other7Setup8Contents of Box8Setup Stand9Adjusting Viewing Angle10Connecting the Monitor11Wall Mounting12Adjusting Optimal Resolution13Windows 1013
Cleaning.6Other.7Setup.8Contents of Box.8Setup Stand.9Adjusting Viewing Angle.10Connecting the Monitor.11Wall Mounting.12Adjusting Optimal Resolution.13Windows 10.13
Other
Setup8Contents of Box8Setup Stand9Adjusting Viewing Angle10Connecting the Monitor11Wall Mounting12Adjusting13Setting Optimal Resolution13Windows 1013
Contents of Box
Setup Stand
Adjusting Viewing Angle
Connecting the Monitor       11         Wall Mounting       12         Adjusting       13         Setting Optimal Resolution       13         Windows 10       13
Wall Mounting    12      Adjusting    13      Setting Optimal Resolution    13      Windows 10    13
Adjusting
Setting Optimal Resolution
Windows 10
Windows 8
Windows 717
Hotkeys19
OSD Setting
LED Indicator
Driver
Monitor Driver
Windows 10 22
Windows 8
Windows 7
i-Menu
e-Saver
Screen+
Troubleshoot
Specification40
General Specification
Preset Display Modes
Pin Assignments
Plug and Play43
Regulation
FCC Notice
WEEE Declaration (Optional)45
WEEE Declaration for India (Optional)45
EPA Energy Star (Optional)
EPEAT Declaration (Optional)
Service
EU WARRANTY FOR AOC MONITORS
Warranty Statement for North & South America (excluding Brazil)

## Safety

## **National Conventions**

The following subsections describe notational conventions used in this document.

#### Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, cautions, and warnings, and they are used as follows:



NOTE: A NOTE indicates important information that helps you make better use of your computer system.



**CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**WARNING:** A WARNING indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.

### Power

The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.

Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.

A Do not overload power strips and extension cords. Overloading can result in fire or electric shock.

A The wall socket shall be installed near the equipment and shall be easily accessible.

### Installation

Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.


Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor.

L Do not place the front of the product on the floor.

If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.

Leave some space around the monitor as shown below. Otherwise, air-circulation may be inadequate hence overheating may cause a fire or damage to the monitor.

See below the recommended ventilation areas around the monitor when the monitor is installed on the wall or on the stand:

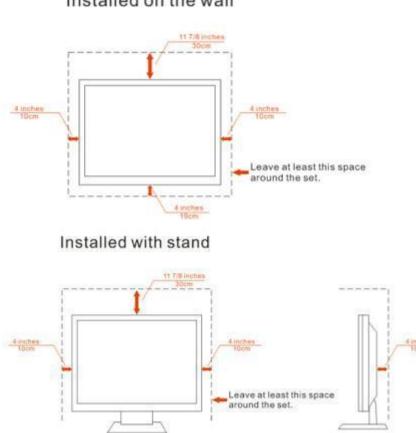


#### Installed on the wall

## Cleaning

Clean the cabinet regularly with cloth. You can use soft-detergent to wipe out the stain, instead of strong-detergent which will cauterize the product cabinet.

When cleaning, make sure no detergent is leaked into the product. The cleaning cloth should not be too rough as it will scratch the screen surface.

Please disconnect the power cord before cleaning the product.

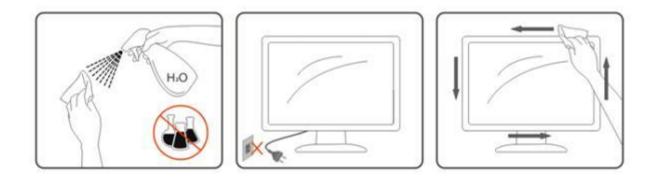

### Other

▲ If the product is emitting a strange smell, sound or smoke, disconnect the power plug IMMEDIATELY and contact a Service Center.

A Make sure that the ventilating openings are not blocked by a table or curtain.


L Do not engage the LCD monitor in severe vibration or high impact conditions during operation.

L Do not knock or drop the monitor during operation or transportation.

For display with glossy bezel the user should consider the placement of the display as the bezel may cause disturbing reflections from surrounding light and bright surfaces.


## Setup

## **Contents of Box**

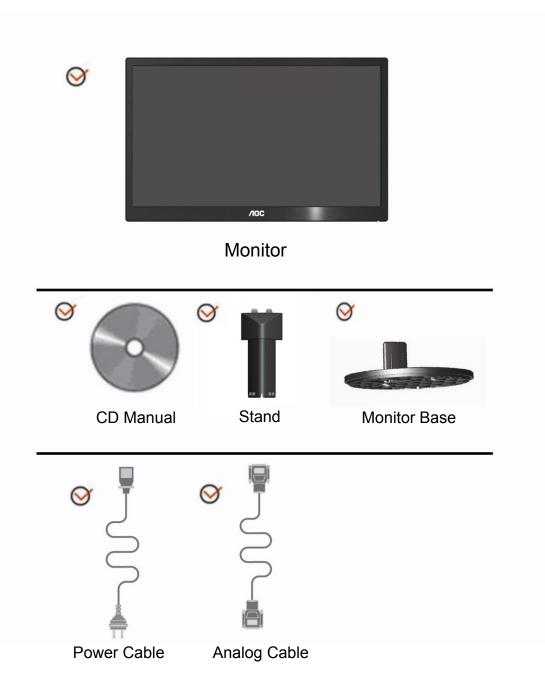

## Setup Stand

Please setup or remove the Stand following the steps as below. Setup:

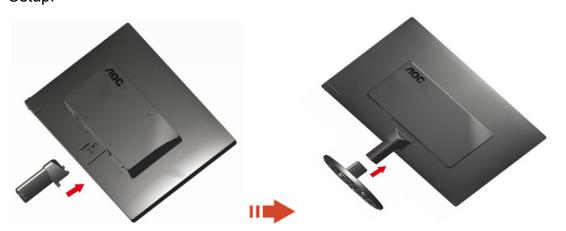

Remove:






## **Adjusting Viewing Angle**

For optimal viewing it is recommended to look at the full face of the monitor, then adjust the monitor's angle to your own preference.

Hold the stand so you will not topple the monitor when you change the monitor's angle.

1> You are able to adjust the monitor's angle from  $-5^{\circ} \sim 15^{\circ}$ .

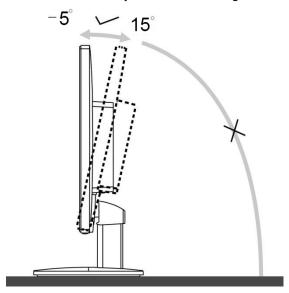


Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.

Do not adjust the viewing angle over 10 degrees in order to avoid damage.

Do not put your hand close to the gap between the monitor and the base to avoid the injury when adjusting the viewing angle.

## **Connecting the Monitor**

Cable Connections In Back of Monitor and Computer:

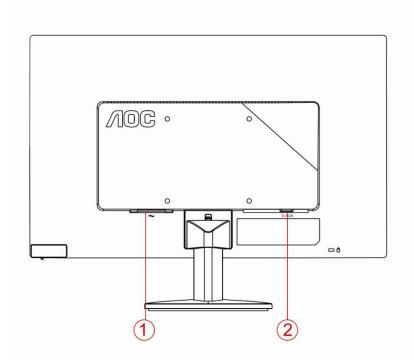

#### 1. Power

2. Analog (D-Sub 15-Pin VGA cable)

To protect equipment, always turn off the PC and LCD monitor before connecting.

1 Connect the power cable to the AC port on the back of the monitor.

2 Connect one end of the 15-pin D-Sub cable to the back of the monitor and connect the other end to the computer's D-Sub port.

3 Turn on your monitor and computer.

If your monitor displays an image, installation is complete. If it does not display an image, please refer Troubleshooting.

### Wall Mounting

Preparing to Install An Optional Wall Mounting Arm.

E2070Swn



This monitor can be attached to a wall mounting arm you purchase separately. Disconnect power before this procedure. Follow these steps:

1 Remove the base.


2 Follow the manufacturer's instructions to assemble the wall mounting arm.

3 Place the wall mounting arm onto the back of the monitor. Line up the holes of the arm with the holes in the back of the monitor.

4 Insert the 4 screws into the holes and tighten.

5 Reconnect the cables. Refer to the user's manual that came with the optional wall mounting arm for instructions on attaching it to the wall.

Noted : VESA mounting screw holes are not available for all models, please check with the dealer or official department of AOC.

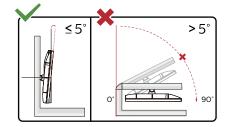

\* Display design may differ from those illustrated

#### WARNING:

1. To avoid potential screen damage, such as panel peeling, ensure that the monitor does not tilt downward by more than -5 degrees.

2. Do not press the screen while adjusting the angle of the monit . Grasp only the bezel.


## Adjusting

## **Setting Optimal Resolution**

#### Windows 10

#### For Windows 10:

- Right click START.
- Click "CONTROL PANEL".

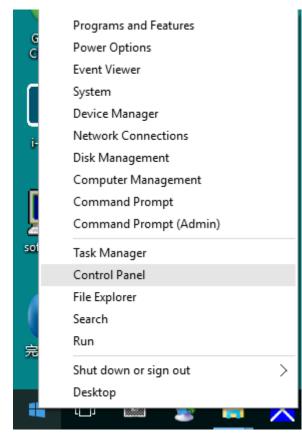


#### Click "DISPLAY".

٠

All Control Panel Berrs					- σ ×
+ 🖬 + Centrel Panel	> All Control Panel Items				v 🚯 Search Cantral Panel 🖉
File Edit View Tools Help					
Adjust your computer's setting	8				Vew by: Large costs •
Administrative Tools	AutoPlay	Backup and Restore (Windows 7)	RitLocker Drive Encryption	Color Management	
Credential Manager	Date and Time	Default Programs	Device Manager	Devices and Printers	
Display	Ease of Access Center	BIO Elo 触摸屏配面	File Explorer Options	File History	
🖌 Flash Player (32-bit)	A Fonts	• HomeGroup	Indexing Options	Finitemet Options	
Seyboard	AF Language	J Mouse	Network and Sharing Center	Versonalization	
Phone and Modern	Power Options	Programs and Features	Realtek HD Audio Manager	Recovery	
🔗 Region	RemoteApp and Desktop Connections	Y Security and Maintenance	Sound	Speech Recognition	
Storage Spaces	Sync Center	System	Taskbar and Navigation	Troubleshooting	
Ser Accounts	Windows Defender	Windows Firewall	Work Folders	颜件 (32-bit)	

Click on the "Change display settings" button.

٠

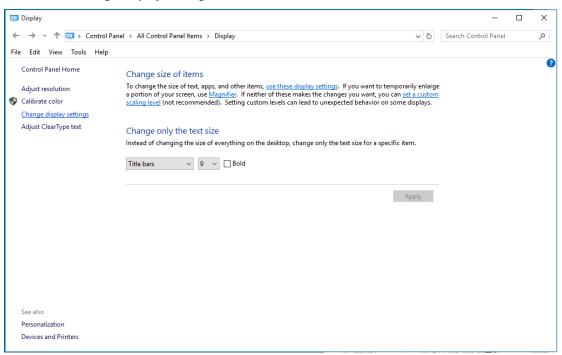

• Set the resolution **SLIDE-BAR** to Optimal preset resolution.

Screen Resolution		-	×
	> All Control Panel Items > Display > Screen Resolution v 🖉 Se	earch Control Panel	P,
File Edit View Tools Help	Change the appearance of your display		
	Detect Identify		
	Display: 1. B24 Resolution: 1920 × 1080 (Recommended) Orientation: Landscape View State St		
	Advanced settings		
	Make text and other items larger or smaller What display settings should I choose?		
	OK Cancel Apply		

#### Windows 8


#### For Windows 8:

• Right click and click **All apps** at the bottom-right of the screen.




Apps				
<b>D 1</b>	C Parte		E Rocker	Compare Compare
Condar	Sigtime -	Catulator	XPS Weet	Control Facel
Carera -	ann 💽	Character Map		Default Programs
Callenge (	tan tan	Mail: Peak Fund	💓 Mayatar	The fugther
fagers	tan 🖬	Carl Retry and	Narator 💽	D state and Support
Lares .		🦝 ***	Dis Schemen	<b>2</b> **
anterest begiven	and a second	Revue Destar	Windows Speech Recognition	Test Minispri
🖂 <sup>666</sup>		international Sector		Windows Defender
Fill Mark		Sound Recenter	CALINA .	Windows Ease Sauche
Contraction of the second		2 Days Records	CPUNee Hote	Windows Lay Transfer Reports
CO Mark		👅 staty hates	Windows Performance	Without Rearries
EE ins		Windows fair and Scart	Minton Performance	
The second second		Windows Income		
nets 🔁		Worker Michael Party	Envirant Tronge	

- Set the "View by" to "Category".
- Click "Appearance and Personalization".

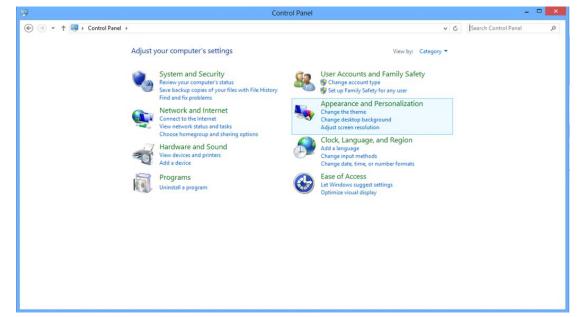

• Click "DISPLAY".

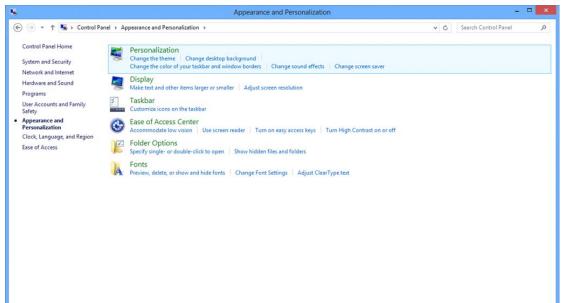


• Set the resolution SLIDE-BAR to Optimal preset resolution

	Screen Resolution		-	
🛞 🌛 🍷 🕇 📮 + Control Panel + Appearance a	Change the appearance of your display  Detect Identify	~ ¢	Search Control Panel	P
	Display: 1. PLX2780H V Resolution: 1920 × 1080 (Recommended) V Orientation: High 1920 × 1080 (Recommended) Advanced settings Make text and other What display setting			
	OK Cancel Apply 1024 × 768 Low			

#### Windows 7

For Windows 7:

- Click START.
- Click "CONTROL PANEL".

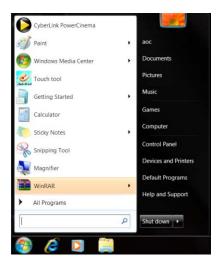


• Click "Appearance".

Action Center	C; Administrative Tools	AutoPlay	19 Backup and Restore	
Color Management	Credential Manager	II Date and Terrer	Default Programs	
Desitop Galgets	JE Device Manager	mg Devices and Protects	📲 Chaptary	
Late of Access Center	E Fulder Options	A Fonts	a Getting Started	
HomeGroup	Ja- Indexing Options	C Internet Options	- Keyboard	
Location and Other Sensors	J Mount	St Network and Sharing Center	in Notification Area Rome	
NVEDIA Control Panel	NVIDIA Physic	📥 Parental Continus	/ Pen and Touch	
Performance Information and Tools	🖉 Personalization	Phone and Modern	Power Options	
Programs and Features	2 Realtek HD Audio Manager	A Lecoury	🔗 Region and Language	
RemoteApp and Desitop Connections	Disound	Ø Speech Recognition	Syne Center	
System	Tablet PC Settings	1 Talibbar and Start Menu	Troubleshooting	
& Unim Accounts	4. Windows Anytime Upgrade	Windows CardSpace	Red Windows Defender	
Windows Feewall	Windows Update			

#### Click "DISPLAY".

٠

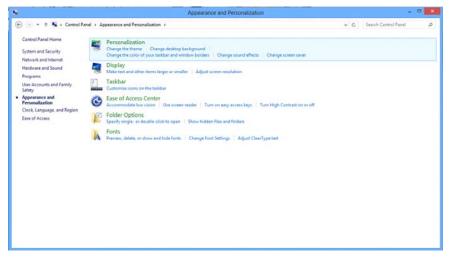


• Click on the "Change display settings" button.

Contra la Contra Parte d	All Cantrol Panel Items + Display		• • • Searct Carrol New P
Control Taked Home Adjust resolution Control and Control Takes Control Salary and Control Takes Adjust Control Salar Control Sale control Home Salary CPR	Make it easier to read what's or	items on your screen by choosing one of these options. To	
Set also Personalization Devices and Printers			

• Set the resolution SLIDE-BAR to Optimal preset resolution

	Screen Resolution				
rol Panel + Appearance and Personalization Change the app		Detect Identify	~ 0	Search Control Panel	R
Display: Resolution: Orientation: Make tost and othe What display settin		Advanced settings			
	1024 × 768 Low	OK Cancel Apply			

## Hotkeys

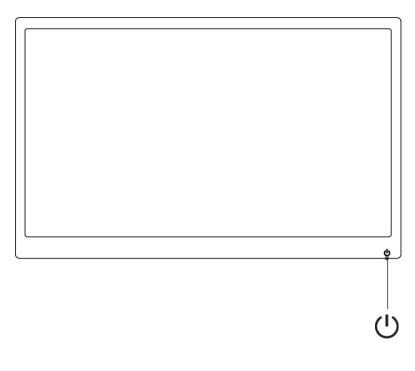

Power/AUTO

#### Power/ AUTO

When off mode, press  $\, O \,$  button to turn on the monitor .

 
When Power on, press  $\, \mho \,$  button continuously about 3 seconds to turn off the monitor .

## **OSD Setting**

Basic and simple instruction on the control keys.



- 1. Press the bottom key to activate the OSD window.
- 2. You can now select any one of the functions by quickly repeat-pressing the bottom key (). The blue box will navigate towards the right as you press the key. You can release () once the blue box highlights the option you want to choose. Note that the selection is one way loop always moving one direction and then returning at beginning of the menu. The blue box will remain on the selected function for about 3 seconds and the function icon will flash three times to confirm the choice visible on the 1st layer of the OSD and activate it.



Auto	AUTO		Auto adjust the H/V position, focus and clock of picture.
Brightness	Ņ.	0-100	Adjust brightness from 0~100.
Contrast	$\bigcirc$	0-100	Adjust contrast from 0~100.
Language		English, France, Spanish, Portuguese, German, Italian, Dutch, Swedish, Finnish <sup>,</sup> Polish, Czech, Russia, Korea, T Chinese, S Chinese, Japanese.	Select the OSD language. Default is English.
Exit	5		Exit the main OSD.

#### Notes:

- 1. Main menu will disappear if no action for about 3 seconds.
- 2. Sub menu will disappear if no action for about 3 seconds.
- 3. Before entering OSD menu,monitor will be powered off when continually pressing the bottom key for more than 3 seconds.

## **LED Indicator**


Status	LED Color	
Full Power Mode	Green	0
Active-off Mode	Flickering Green	0

 
## Driver

## **Monitor Driver**


#### Windows 10

- Start Windows® 10
- Right click START.
- Click "Control Panel".

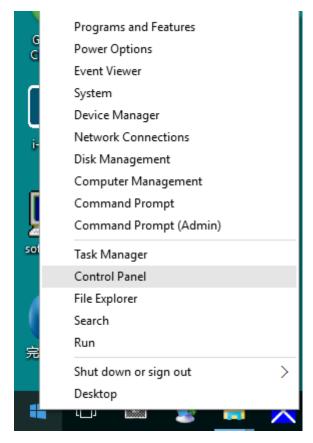



•

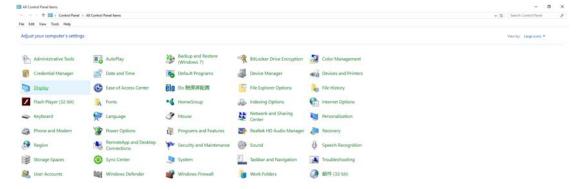

Click on the "Change display settings" button

💷 Display		-	×
← → ∽ ↑ 💷 ≻ Control Par	nel > All Control Panel Items > Display 🗸 🗸	Search Control Panel	ρ
File Edit View Tools Help			
Control Panel Home	Change size of items		?
Adjust resolution	To change the size of text, apps, and other items, <u>use these display settings</u> . If you want to temporarily enlarge a portion of your screen, use <u>Magnifier</u> . If neither of these makes the changes you want, you can <u>set a custom</u>		
🗣 Calibrate color	scaling level (not recommended). Setting custom levels can lead to unexpected behavior on some displays.		
Change display settings			
Adjust ClearType text	Change only the text size		
	Instead of changing the size of everything on the desktop, change only the text size for a specific item.		
	Title bars V 9 V Bold		
	Apply		
See also			
Personalization			
Devices and Printers			

• Click the "Advanced Settings" button.

Screen Resolution		-	×
← → ֊ ↑ 🛄 > Control Panel	> All Control Panel Items -> Display -> Screen Resolution -> 한	Search Control Panel	P
File Edit View Tools Help			
	Change the appearance of your display		
	Detect Identify		
	Display: 1. B24 ~		
	Resolution: 1920 × 1080 (Recommended) ~		
	Orientation: Landscape $\lor$		
	Advanced settings		
	Make text and other items larger or smaller		
	What display settings should I choose?		
	OK Cancel Apply		
1			 

• Click the "Monitor" tab and then click the "Properties" button.

Monitor Type Generic PnP Monitor Monitor Settings Screen refresh rate: 60 Hertz Hide modes that this monitor cannot display Bearing this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hardware Colors: True Color (32 bit)	lapter	Monitor	Troubleshoot	Color Management	GeForce 9100M G
Monitor Settings Screen refresh rate: 60 Hertz Hide modes that this monitor cannot display Dearing this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display end/or damaged hardware Colors:	Monit		ric PnP Monitor		
Screen refresh rate: 60 Hertz Hide modes that this monitor cannot display Bearing this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hardware. Colors:					Properties
60 Hertz  Hide modes that this monitor cannot display  Hide modes that this monitor cannot display  cannot display correctly. This may lead to an unusable display and/or damaged hardware.  Colors:	Monit	or Setting:	5		
Hide modes that this monitor cannot display Hide modes that this monitor cannot display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hardware Colors:	Scree	en refresh	rate:		
Electing this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hardware	60 H	ertz			•
	1114	ide mode	s that this monito	or cannot display	
True Color (32 bit)	Clear	ing this ch ot display	eck box allows correctly. This r	you to select display	
	Clear cann damr	ing this ch ot display aged hard rs:	eck box allows correctly. This r Ware	you to select display	
	Clear cann damr	ing this ch ot display aged hard rs:	eck box allows correctly. This r Ware	you to select display	
	Clear cann damr	ing this ch ot display aged hard rs:	eck box allows correctly. This r Ware	you to select display	
	Clear cann damr	ing this ch ot display aged hard rs:	eck box allows correctly. This r Ware	you to select display	


Click the "Driver" tab.

٠

General	Driver	Details	
	Gene	eric PnP Mo	nitor
	Drive	r Provider.	Microsoft
	Drive	r Date:	6/21/2006
	Drive	r Version:	6.1.7600.16385
	Digita	al Signer.	Microsoft Windows
Dr	iver Det	ails	To view details about the driver files.
Up	date Driv	/er	To update the driver software for this device.
Rol	Back D	tiver	If the device fails after updating the driver, roll back to the previously installed driver.
	Disable		Disables the selected device.
	Uninstal		To uninstall the driver (Advanced).

• Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver...

"and then click the "Browse my computer for driver software" button.

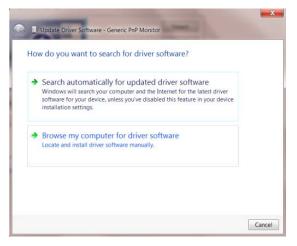

٠

Select "Let me pick from a list of device drivers on my computer".

rowse for driver softv	vare on your comput	er		
earch for driver software in t	his location:			
D:\Drivers\Touch device		-	Browse	
Include subfolders				
Let me pick from a	a list of device drivers	s on my	computer	
	ed driver software compati me category as the device.		e device, and al	1

• Click the **"Have Disk"** button. Click on the **"Browse"** button and navigate to the following directory: X:\Driver\module name(where X is the drive letter designator for the CD-ROM drive).

Install Fre	device driver you want to install for this hard	
	Insert the manufacturer's installation disk, and then make sure that the correct drive is selected below.	OK Cancel
	Copy manufacturer's files from: F\Drivers\e936Vw	Browse

- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk drive.

- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

#### Windows 8

- Start Windows® 8
- Right click and click **All apps** at the bottom-right of the screen.



<b>D W</b>	C Preser		E Roudfast	Company
Candy Candy	igther 🔁	Catalater	XPS Valuer	Control Favor
Canana -	💽 lam	Character Map		Cerisal: Programs
College	<b>a a</b>	Math Pepel Farial	Wayster	The last of the la
a france	tere 🛄	Fictory and	Tanatar .	Endpart Support
and there	100 View	🥳 ***	136 Schem	<b>2</b> **
E Hand Lakow	and an and a second sec	Remote Dentage Connection	Windows Speech Recognition	Test Minope
🖂 <sup>664</sup>		Tracing Test		Windows Dehender
Real Mark		Sound Recorder	CRANe=	Without Say Saude
Contraction of the second		Inga Records	CPUMee Hep	Witten Lay Transfe Kaparts
<b>1</b>		🔤 Miny Nativa	Without Performance.	VINDOR. RearChel
EE How		Windows fair and Gram	Windows Ferformance.	
nest a		Windows Journal		
Parts		Weeksey Mada	Essenant Prompt	

- Click on the "Control Panel" icon
- Set the "View by" to "Large icons" or "Small icons".

djust your computer's setti	ngs			View	tyr Large earsi *
Action Center	Administrative Tools	AutoPlay	ः 🍕 BitLocker Drive Encryption	Color Management	Category Large spen Senal spen
Credential Manager	Date and Time	Default Programs	Device Manager	ticg Devices and Printers	
Display	Ease of Access Center	🚓 Family Salety	File History	Flash Player (32-bit)	
Folder Options	A Forts	NormeGroup	A Indexing Options	Internet Options	
S Keyboard	SF Language	Cocation Settings	I Mouse	Network and Sharing Center	
Notification Area Icon	s NVIDIA Control Panel	Performance Information and Tools	Personalization	Phone and Modern	
Power Options	Programs and Features	Recovery	🔗 Region	Remote/pp and Desktop	
Sound	Speech Recognition	Storage Spaces	Sync Center	1 System	
Taskbar	Troubleshooting	🙉 User Accounts	Windows 7 File Recovery	Windows Defender	
Windows Firmwall	Windows Update				
					8 8 8 J

Click on the "Display" icon.

•

djust your computer's settings				View by: Small Jonns -
n n - n - iou				
Action Center	C; Administrative Tools	AutoPlay	19 Backup and Restore	
Color Management	E Credential Manager	all Date and Terrer	Chefault Programs	
Cesitop Gadgets	J Clevice Manager	mg Devices and Posters	🖷 Digay	
Lese of Access Center	E Folder Options	A Fonts	a Getting Started	
HomeGroup	Ja Indexing Options	C Internet Options	- Keyboard	
Location and Other Sensors	J Moure	Startwork and Sharing Center	🔄 Notification Area Rome	
NVEDIA Control Panel	NVILLA Physic	📥 Parental Controls	/ Pen and Touch	
Performance Information and Tools	E Personalization	Phone and Modern	Power Options	
Drograms and Features	🗃 Reatiek HD Audiet Manager	A Lecoury	🔗 Region and Language	
RemoteApp and Desitop Connections	() Sound	0 Speech Recognition	Sync Center.	
System	Tablet PC Settings	1 Talabar and Start Menu	Troubleshooting	
Liter Accounts	45 Windows Anytime Upgrade	I Windows CardSpace	Ma Windows Defender	
Windows Foewall	E Windows Update			


• Click on the "Change display settings" button.

Control Panel Home Control Panel Home Adjust resolution © Calibrate color Change display antings Adjust Crear Type Ires Set contern test size (DPD	Al Censor Home * Display Make it easier to read what's or You can change the size of test and offer temporarily enlarge juit part of the score @ service ans: @ Medium - 125% (service) @ Larger - 150%	items on your screen by choising one of these options. To	• • • Guard Control Alexed
		Autory Autory	
Set also Personalization Devices and Printers			

• Click the "Advanced Settings" button.

😧 🕞 a 🖬 🕯 Control Panei 🕨 All Control	(Panel Items ) - Dapasy + Soven Resolution Change the appearance of your display	Least Control Face
	. 0 🚥	Defect
	Display I. Heisika Default Flat Reest - Resolution 1920 + 1930 (recommended) - Orientation Landscape -	
	Materies and other Hers target or scale. What starte petropy should choose!	Advanced settings
	OK	Canol Augo

• Click the "Monitor" tab and then click the "Properties" button.

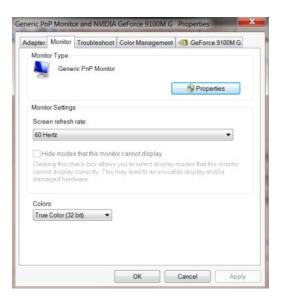

• Click the "Driver" tab.

General	Driver	Details	
	Gene	ric PnP Mo	nitor
	Drive	r Provider	Microsoft
	Drive	r Date:	6/21/2006
	Drive	r Version:	6.1.7600.16385
	Digita	al Signer:	Microsoft Windows
Dr	iver Det	ails	To view details about the driver files.
Up	date Driv	/er	To update the driver software for this device.
Rol	l Back D	tiver	If the device fails after updating the driver, roll back to the previously installed driver.
	Disable		Disables the selected device.
	Uninstal		To uninstall the driver (Advanced).

٠


٠

Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update

Vertice
 Vertical Provided Active Control Physical Physicae Physicae Physicae Physicae Physicae Physicae Physicae Physica


Driver..." and then click the "Browse my computer for driver software" button.

Select "Let me pick from a list of device drivers on my computer".

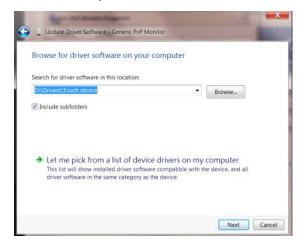

• Click the "Have Disk" button. Click on the "Browse" button and navigate to the following directory:

X:\Driver\module name (where X is the drive letter designator for the CD-ROM drive).

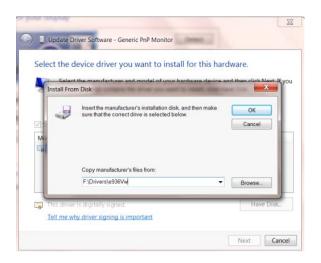


- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk drive.
- Close all open windows and remove the CD.
- · Restart the system. The system will automatically select the maximum refresh rate and

corresponding Color Matching Profiles.

#### Windows 7


- Start Windows® 7
- Click on the "Start" button and then click on "Control Panel".

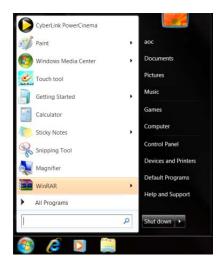


• Click on the "Display" icon.

Action Center	C; Administrative Tools	AutoPlay	1/2 Backup and Restore	
Color Management	E Credential Manager	all Date and Time	Default Programs	
Cesitop Gadgets	Jevice Manager	mg Devices and Posters	🖷 Display	
Later of Access Center	E Folder Options	A Fosts	a Getting Started	
A HomeGroup	Ja Indexing Options	C Internet Options	- Keyboard	
Location and Other Sensors	J Mount	🗱 Network and Sharing Center	San Notification Area Romi	
NVEDIA Control Panel	NVILLA Physic	🚵 Parental Controls	/ Pen and Touch	
Performance Information and Tools	🖉 Personalization	Phone and Modern	🐨 Power Options	
C Programs and Features	Teatrek HD Audie: Manager	A Recovery	🔗 Region and Language	
RemoteApp and Desitop Connection	@ bound	Ø Speech Recognition	Sync Center.	
System	Tablet PC Settings	Talibbar and Start Menu	Troubleshooting	
& Unit Accounts	K Windows Anytime Upgrade	I Windows Cardilator	Red Windows Defender	
Windows Forwall	E Windows Update			

• Click on the "Change display settings" button.

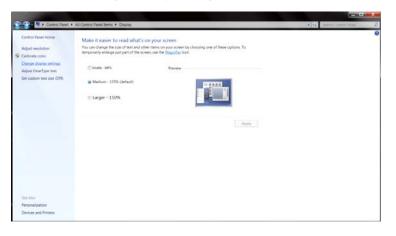

• Click the "Advanced Settings" button.

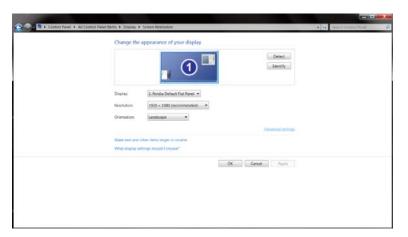


• Click the "Monitor" tab and then click the "Properties" button.

lapter	Monitor	Troubleshoot	Color Management	GeForce 9100M G
Monit	or Type			
	Gene	ric PnP Monitor		
0			-	
				Properties
Monit	or Setting:	s		
	en refresh			
60 H		rata.		-
H	ide mode	s that this monito	or cannot display	
Clear	ing this ch	eck.box.allows	you to select display	modes that this monitor
Clear	ing this ch	eck box allows correctly. This i		
Clear	ing this ch ot display	eck box allows correctly. This i	you to select display	
Clear	ing this ch ot display aged hard	eck box allows correctly. This i	you to select display	
Clear cann dama	ing this ch ot display aged hard	neck box allows correctly. This i Ware	you to select display	
Clear cann dama	ing this ch ot display aged hard rs:	neck box allows correctly. This i Ware	you to select display	
Clear cann dama	ing this ch ot display aged hard rs:	neck box allows correctly. This i Ware	you to select display	
Clear cann dama	ing this ch ot display aged hard rs:	neck box allows correctly. This i Ware	you to select display	
Clear cann dama	ing this ch ot display aged hard rs:	neck box allows correctly. This i Ware	you to select display	
Clear cann dama	ing this ch ot display aged hard rs:	neck box allows correctly. This i Ware	you to select display	

• Click the "Driver" tab.

eric PnP Moni er Provider er Date: er Version: al Signer: iails	itor Microsoft 6/21/2006 6.1.7600.16385 Microsoft Windows To view details about the driver files.		
er Date: er Version: al Signer:	6/21/2006 6.1.7600.16385 Microsoft Windows		
er Version: al Signer.	6.1.7600.16385 Microsoft Windows		
al Signer.	Microsoft Windows		
ails	To view details about the driver files.		
ver	To update the driver software for this device.		
hiver	If the device fails after updating the driver, roll back to the previously installed driver.		
•	Disables the selected device.		
4	To uninstall the driver (Advanced).		
	niver		

• Open the **"Update Driver Software-Generic PnP Monitor**" window by clicking on **"Update Driver...** " and then click the **"Browse my computer for driver software**" button.

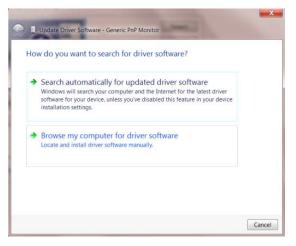


•

Select "Let me pick from a list of device drivers on my computer".

Browse fo	r driver softw	are on your co	omputer		
Search for di	iver software in t	his location:			
D:\Drivers\	ouch device		•	Browse	
Include su	bfolders				
→ let m	e nick from a	list of device	drivers on my	computer	
This lis	t will show install	ed driver software	compatible with th		
driver	oftware in the sa	me category as the	device.		

• Click the **"Have Disk"** button. Click on the **"Browse"** button and navigate to the following directory: X:\Driver\module name(where X is the drive letter designator for the CD-ROM drive).

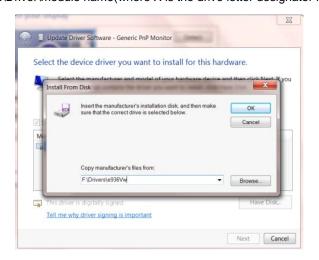

- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk drive.

- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

## i-Menu



Welcome to "i-Menu" software by AOC. i-Menu makes it easy to adjust your monitor display setting by using on screen menus instead of the OSD button on the monitor. To complete installation, please follow the installation guide.

i-Menu	Lumi	nance	98
		×	
① Contrast	<u> </u>	🔆 Brightness	50
γ Gamma	d Gamma 1 ▶	🔯 Eco Mode	4 🗹 🕨
DCR			
			\$
0	7	DC	

### e-Saver



Welcome to use AOC e-Saver monitor power management software! The AOC e-Saver features Smart Shutdown functions for your monitors, allows your monitor to timely shutdown when PC unit is at any status (On, Off, Sleep or Screen Saver); the actual shutdown time depends on your preferences (see example below). Please click on "driver/e-Saver/setup.exe" to start installing the e-Saver software, follow the install wizard to complete software installation.

Under each of the four PC status, you may choose from the pull-down menu the desired time (in minutes) for your monitor to automatically shutdown. The example above illustrated:

- 1) The monitor will never shutdown when the PC is powered on.
- 2) The monitor will automatically shutdown 5 minutes after the PC is powered off.
- 3) The monitor will automatically shutdown 10 minutes after the PC is in sleep/stand-by mode.
- 4) The monitor will automatically shutdown 20 minutes after the screen saver appears.




You can click "RESET" to set the e-Saver to its default settings like below.

/IOC	1000			- ? 🗙
				<b>©</b>
When PC	On	Off	Sleep	Screen Saver
Monitor Off	Never	After 5 minutes	After 10 minutes	After 20 minutes
		Csav	ar -	RESET

## Screen+



Welcome to "Screen+" software by AOC, Screen+ software is a desktop screen splitting tool, it splits the desktop into different panes, each pane displays a different window. You only need to drag the window to a corresponding pane, when you want to access it. It supports multiple monitor display to make your task easier. Please follow the installation software to install it.

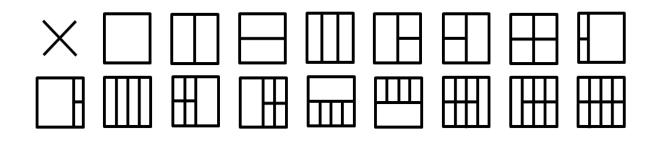

# Troubleshoot

Problem & Question	Possible Solutions
Power LED Is Not ON	Make sure the power button is ON and the Power Cord is properly connected to a grounded power outlet and to the monitor. Is the power cord connected properly? Check the power cord connection and power supply. Is the cable connected correctly? (Connected using the D-sub cable) Check the DB-15 cable connection. If the power is on, reboot the computer to see the initial screen (the login screen), which can be seen.
No images on the screen	If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows ME/XP/2000) and then change the frequency of the video card. (Refer to the Setting the Optimal Resolution) If the initial screen (the login screen) does not appear, contact the Service Center or your dealer. Can you see "Input Not Supported" on the screen? You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly. Adjust the maximum resolution and frequency that the monitor can handle properly. Make sure the AOC Monitor Drivers are installed.
Picture Is Fuzzy & Has Ghosting Shadowing Problem	Adjust the Contrast and Brightness Controls. Press to auto adjust. Make sure you are not using an extension cable or switch box. We recommend plugging the monitor directly to the video card output connector on the back .
Picture Bounces, Flickers Or Wave Pattern Appears In The Picture	Move electrical devices that may cause electrical interference as far away from the monitor as possible. Use the maximum refresh rate your monitor is capable of at the resolution your are using.

Monitor Is Stuck In Active Off-Mode''	The Computer Power Switch should be in the ON position. The Computer Video Card should be snugly fitted in its slot. Make sure the monitor's video cable is properly connected to the computer. Inspect the monitor's video cable and make sure no pin is bent. Make sure your computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.	
Missing one of the primary colors (RED, GREEN, or BLUE)	Inspect the monitor's video cable and make sure that no pin is damaged. Make sure the monitor's video cable is properly connected to the computer.	
Screen image is not centered or sized properly	<b>not centered</b> Adjust H-Position and V-Position or press hot-key (Power/AUTO).	
Picture has color defects (white does not look white)	Adjust RGB color or select desired color temperature.	
Horizontal or vertical disturbances on the screen	Use Windows 95/98/2000/ME/XP shut-down mode Adjust CLOCK and FOCUS. Press to auto-adjust.	

# **Specification**

# **General Specification**

	Product name	E2070Swn/E2070Sv	E2070Swn/E2070SwnL		
Panel	Driving system	TFT Color LCD			
	Viewable Image Size	49.4cm diagonal			
	Pixel pitch	0.2712*RGB mm(H) x 0.2712 mm(V)			
	Video	-	G, B Analog Interface		
	Separate Sync.	H/V TTL			
	Display Color	16.7M Colors			
	Dot Clock	170MHz			
	Horizontal scan range	30 kHz - 83 kHz			
	Horizontal scan Size(Maximum)	433.92mm			
	Vertical scan range	50 Hz - 76 Hz			
	Vertical scan Size(Maximum)	236.34mm			
	Optimal preset resolution	1600 x 900@60Hz			
Resolution	Plug & Play	VESA DDC2B/CI			
	Input Connector	D-Sub 15pin			
	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM			
	Power Source	100-240V~, 50/60Hz			
	Power Consumption	Active: 18 W(typical)			
		Standby mode < 0.5W			
Physical	Connector Type	15-pin Mini D-Sub			
Characteristics	Signal Cable Type	Detachable			
	Temperature:	Operating	0° ~ 40°		
Environmental		Non-Operating	-25°~ 55°		
	Llumidit <i>u</i>	Operating	10% ~ 85% (non-condensing)		
	Humidity:	Non-Operating	5% ~ 93% (non-condensing)		
		Operating	0~ 3658m (0~ 12000 ft )		
	Altitude:	Non-Operating	0~ 12192m (0~ 40000 ft )		




E2070SWN

# Preset Display Modes

		H.	V.
Standard	Resolution	Frequency	Freq.
	640x480@60Hz	31.469	59.940
VGA	640x480@72Hz	37.861	72.809
	640x480@75Hz	37.500	75.00
	800x600@56Hz	35.156	56.250
	800x600@60Hz	37.879	60.317
SVGA —	800x600@72Hz	48.077	72.188
	800x600@75Hz	46.875	75.000
	1024x768@60Hz	48.363	60.004
XGA	1024x768@70Hz	56.476	70.069
	1024x768@75Hz	60.023	75.029
WSXGA -	1280x720@60Hz	45.000	60.000
	1600x900@60Hz	60.000	60.000
IBM MODE DOS	720x400@70HZ	31.469	70.087
XGA	1024x768@72Hz	57.515	72.100
MAC MODE XGA	1024x768@60Hz	48.780	60.001
MAC MODE VGA	640x480@67Hz	35.000	66.667
MAC MODE SVGA	832x624@75Hz	49.725	74.551
MAC MODE XGA	1024x768@75Hz	60.241	74.927

# Pin Assignments

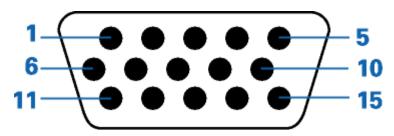

Pin Number	15-Pin Side of the Signal Cable
1	Video-Red
2	Video-Green
3	Video-Blue
S	N.C.
5	Detect Cable
6	GND-R
7	GND-G
8	GND-B
9	+5V
10	Ground
11	N.C.
12	DDC-Serial data
13	H-sync
14	V-sync
15	DDC-Serial clock

## **Plug and Play**

### Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.

# Regulation

## **FCC Notice**

#### FCC Class B Radio Frequency Interference Statement WARNING: (FOR FCC CERTIFIED MODELS)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

#### NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference. It is the responsibility of the user to correct such interference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## WEEE Declaration (Optional)

Disposal of Waste Equipment by Users in Private Household in the European Union.



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste.Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment.The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste

disposal service or the shop where you purchased the product .

## **E-Waste Declaration for India**



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment . The separate collection and recycling of your waste equipment at the time of disposal

will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about E -waste please visit <u>http://www.aocindia.com/ewaste.php</u> and to know where you can drop off your waste equipment for recycling in India please contact on below given contact details.

Helpline number: 080-6788-6788 / 080-3323-1313 (Monday to Saturday, 10 a.m. to 6 p.m.)

Centralized E-waste collection center

Address: TPV Technology India Private Limited,

59, Maheswari Nagar, 1st Main Road, Mahadevapura Post, Whitefield Road,

Bangalore, Karnataka, PIN: 560048, Tel: 080-3023-1000

E-mail: serviceindia@aoc.c

## **Restriction on Hazardous Substances statement (India)**

This product complies with the "E-Waste (Management) Rules, 2016" CHAPTER V, rule 16, sub-rule (1). Whereas New Electrical and Electronic Equipment and their components or consumables or parts or spares do not contain Lead, Mercury, Cadmium, Hexavalent Chromium, polybrominated biphenyls and polybrominated diphenyl ethers beyond a maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers and of 0.01% by weight in homogenous materials for cadmium. except of exemptions set in Schedule 2 of the Rule.

## EPA Energy Star (Optional)



ENERGY STAR® is a U.S. registered mark. As an ENERGY STAR® Partner, AOC International (Europe) BV and Envision Peripherals, Inc. have determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

## **EPEAT Declaration (Optional)**



EPEAT is a system to help purchasers in the public and private sectors evaluate, compare and select desktop computers, notebooks and monitors based on their environmental attributes. EPEAT also provides a clear and consistent set of performance criteria for the design of products, and provides an opportunity for manufacturers to secure market recognition for efforts to reduce the environmental impact of its products.

#### AOC believes in protecting the environment.

With a key concern for the conservation of natural resources, as well as landfill protection, AOC announces the launch of AOC monitor's packaging recycling program. This program is designed to help you discard of your monitor carton and filler materials properly. If a local recycling center is not available, AOC will recycle the packaging material for you, including foam filler and carton. AOC Display solution will only recycle AOC monitor packaging. Please refer to the following website address:

#### Only for North and South American, excluding Brazil:

http://us.aoc.com/about/environmental\_impact

For Germany: http://www.aoc-europe.com/en/service/tco.php

For Brazil: http://www.aoc.com.br/2007/php/index.php?reg=pagina&pgn\_id=134

## Service

## **EU WARRANTY FOR AOC MONITORS**

### LIMITED THREE-YEAR WARRANTY\*

For AOC LCD Monitors sold within Europe, AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of Three (3) years after the original date of consumer purchase. During this period, AOC International (Europe) B.V. will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. In the absent of the proof of purchase, the warranty will start 3 months after the date of manufacturing indicated on the product.

If the product appears to be defective, please contact your local dealer or refer to the service and support section on <u>www.aoc-europe.com</u>.for warranty instructions. Deliver the product freight pre-paid, along with the dated proof of purchase, to the AOC Certified or Authorized Service Center under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

AOC International (Europe) B.V. is not responsible for any damaged during transport due to improper packing. AOC International (Europe) B.V. will pay the return shipping charges within one of the countries specified within this warranty statement. AOC International (Europe) B.V. is not responsible for any costs associated with the transportation of product across international borders. This includes the international border within the European Union. If the LCD Monitor is not available for collection when the currier attends, you will be charged a collection fee.

### \* This limited warranty does not cover any losses or damages that occur as a result of:

- Improper installation or maintenance
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or Authorized Service Center
- Improper environments like humidity and dusts
- Damaged by violence
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

# ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A

PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

### Warranty Statement for North & South America (excluding Brazil)

#### WARRANTY STATEMENT

for AOC Color Monitors Including those Sold within North America as Specified

Envision Peripherals, Inc. warrants this product to be free from defects in material and workmanship for a period of three (3) years for parts & labor and one (1) year for CRT Tube or LCD Panel after the original date of consumer purchase. During this period, EPI ( EPI is the abbreviation of Envision Peripherals, Inc. ) will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. The parts or product that are replaced become the property of EPI.

In the USA to obtain service under this limited warranty, call EPI for the name of the Authorized Service Center closest to your area. Deliver the product freight pre-paid, along with the dated proof of purchase, to the EPI Authorized Service Center. If you cannot deliver the product in person:

- Pack it in its original shipping container (or equivalent)
- Put the RMA number on the address label
- Put the RMA number on the shipping carton
- Insure it (or assume the risk of loss/damage during shipment)
- Pay all shipping charges

EPI is not responsible for damage to inbound product that was not properly packaged.

EPI will pay the return shipment charges within one of the countries specified within this warranty statement. EPI is not responsible for any costs associated with the transportation of product across international borders. This includes the international borders of the countries within this warranty statements.

In the United States and Canada contact your Dealer or EPI Customer Service, RMA Department at the toll free number (888) 662-9888. Or you can request an RMA Number online at www.aoc.com/na-warranty.

\* This limited warranty does not cover any losses or damages that occur as a result of:

- Shipping or improper installation or maintenance
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an EPI Authorized Service Center
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical power failures, surges, or other irregularities

This three-year limited warranty does not cover any of the product's firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modification or alteration.

#### ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF

MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR AND ONE (1) YEAR FOR CRT TUBE OR LCD PANEL FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

EPI OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCLUSIVELY AS STATED HERE. EPI' LIABILITY, WHETHER BASED ON CONTRACT, TORT. WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL ENVISION PERIPHERALS, INC. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

In the United States of America, this limited warranty is only valid for Products purchased in the Continental United States, Alaska, and Hawaii.

Outside the United States of America, this limited warranty is only valid for Products purchased in Canada.

Information in this document is subject to change without notice. For more details, please visit:

USA: http://us.aoc.com/support/warranty ARGENTINA: http://ar.aoc.com/support/warranty BOLIVIA: http://bo.aoc.com/support/warranty\_ CHILE: http://cl.aoc.com/support/warranty\_\_\_\_ COLOMBIA: http://co.aoc.com/warranty COSTA RICA: http://cr.aoc.com/support/warranty DOMINICAN REPUBLIC: http://do.aoc.com/support/warranty ECUADOR: http://ec.aoc.com/support/warranty EL SALVADOR: http://sv.aoc.com/support/warranty GUATEMALA: http://gt.aoc.com/support/warranty HONDURAS: http://hn.aoc.com/support/warranty\_\_\_\_\_ NICARAGUA: http://ni.aoc.com/support/warranty PANAMA: http://pa.aoc.com/support/warranty PARAGUAY: http://py.aoc.com/support/warranty\_\_\_\_ PERU: http://pe.aoc.com/support/warranty URUGUAY: http://pe.aoc.com/warranty VENEZUELA: http://ve.aoc.com/support/warranty IF COUNTRY NOT LISTED: http://latin.aoc.com/warranty