

## Disassembly SOP for Q27G4F-Q27G4X\*

### 1. Suggest Tools

Here are some tools that can be used for the LCD monitor's service and repair.

#### Philips-head Screwdriver

Use a Philips-head screwdriver to fasten/remove the K- or B-typed screws



P/N: N/A

#### Gloves

To protect LCD Panel and your hand



P/N: (L) N/A (M) N/A

#### C/D Disassembly Tool

Use C/D Disassembly Tool to open cosmetic cover and avoid scratch.



P/N: N/A


#### Spacer Screwdriver

Use a spacer screwdriver to fasten/remove spacer screws or hex screws.



P/N: N/A

2. Remove stand and base.

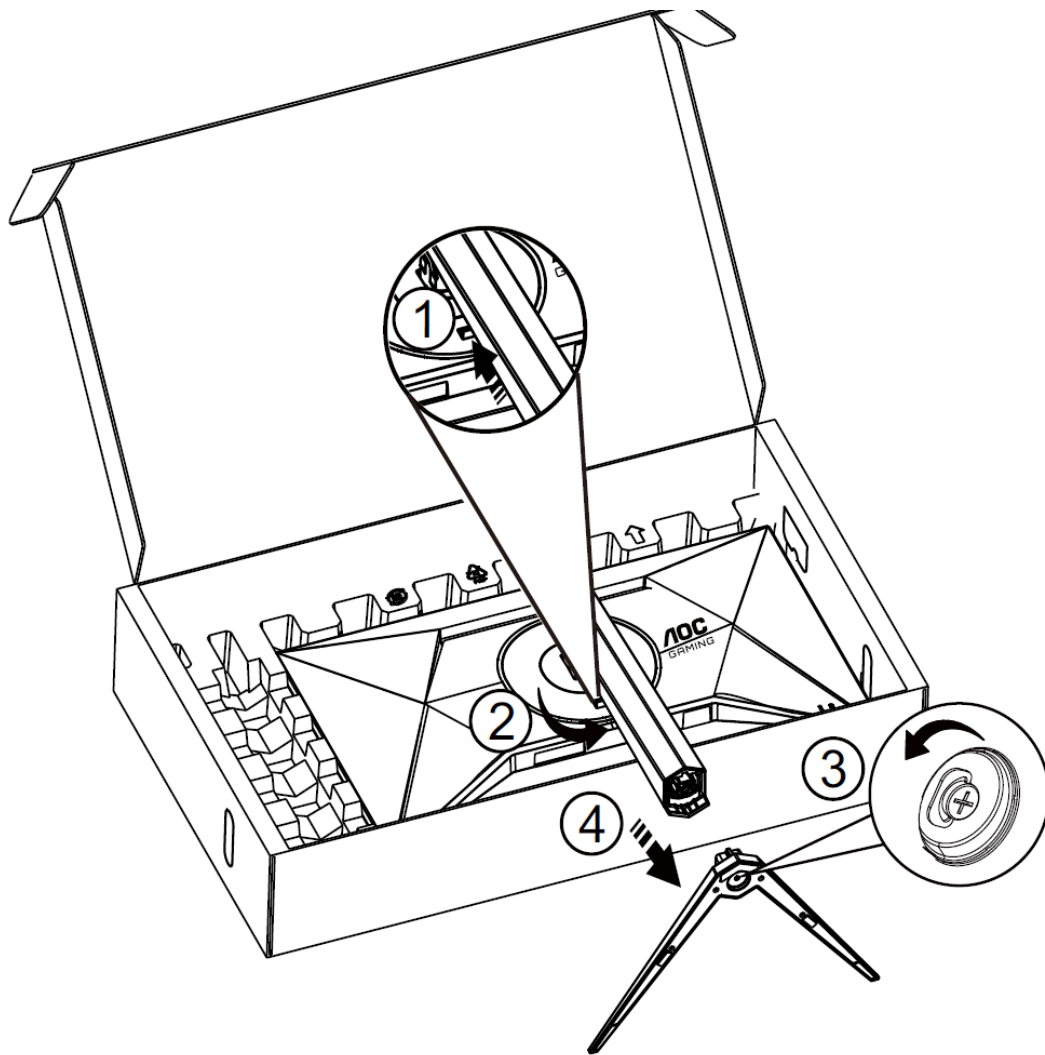


3. Remove screws.




4. Use disassembly tool to open all the latches along the edge of rear cover.




5. Remove the rear cover, then take off all of the tapes and disconnect the connectors.

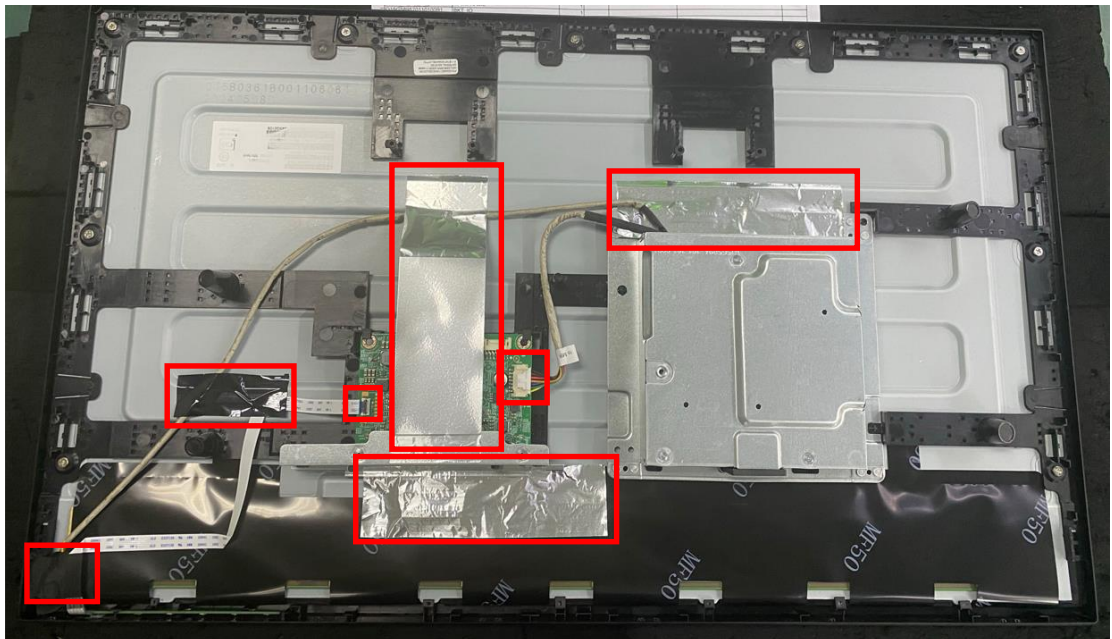


6. Remove mainframe and FFC cable.

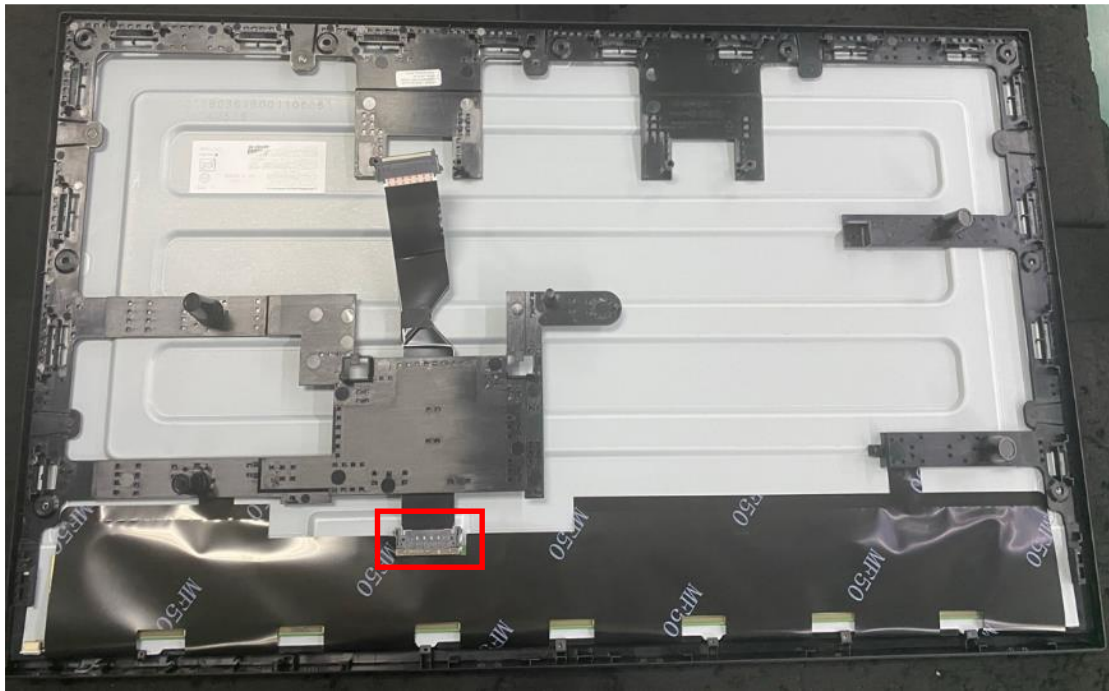


7. Remove screws.

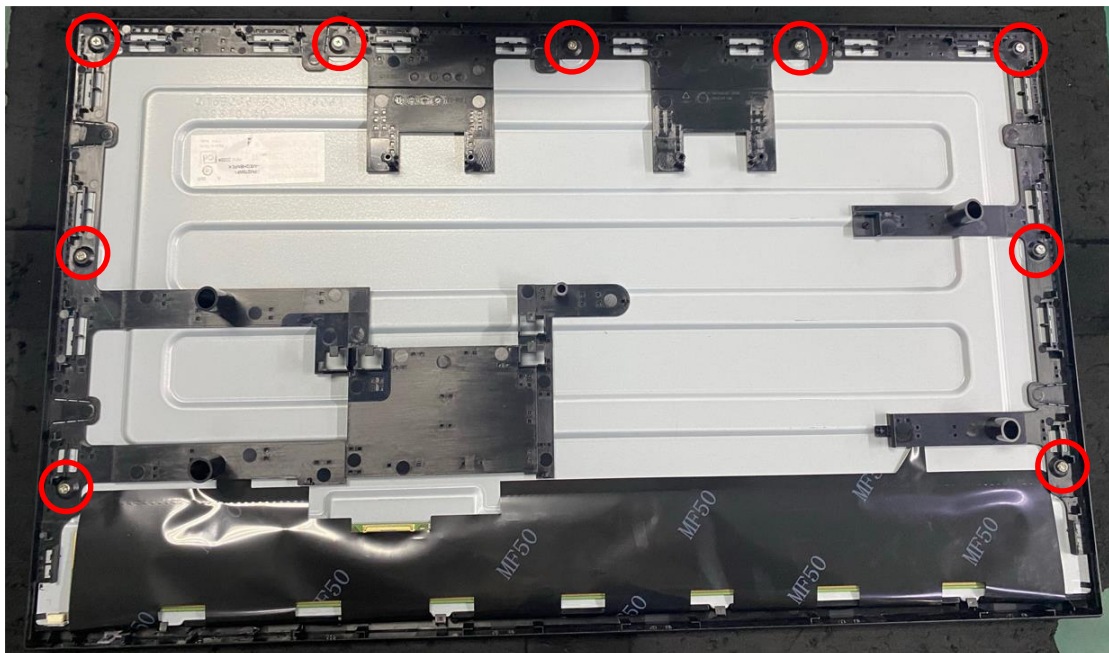

8. Get panel and middle frame.

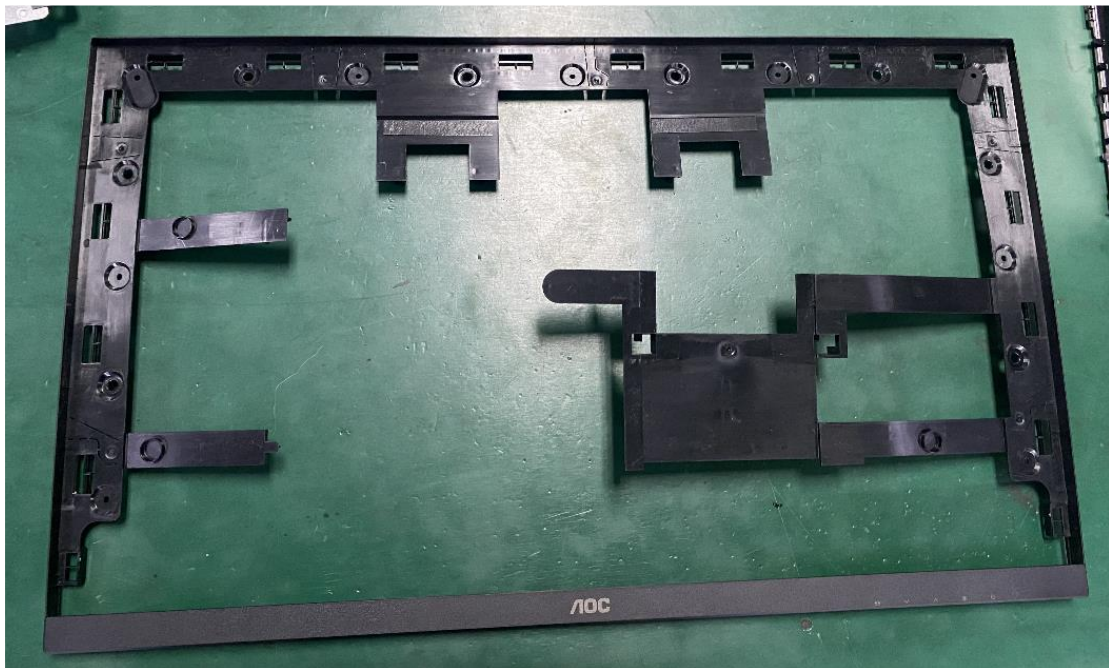

9. Remove Mylar.

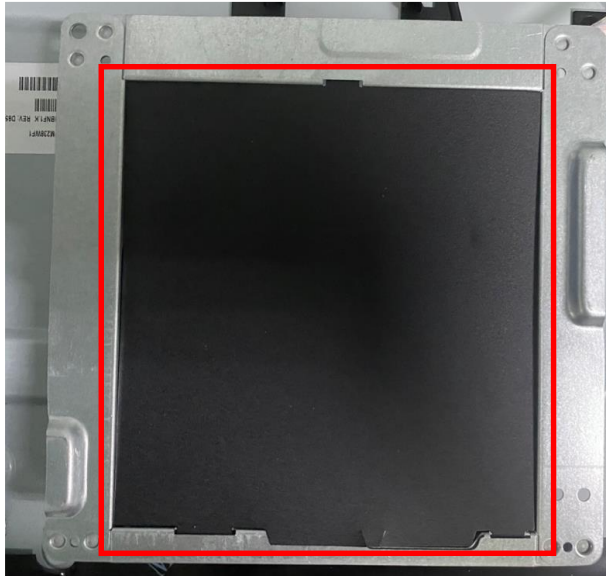

10. Remove screws to get boards.

