Disassembly SOP for U27B3A

1. Suggest Tools

Here are some tools that can be used for the LCD monitor's service and repair.

Philips-head Screwdriver

Use a Philips-head screwdriver to fasten/remove the K- or B-typed screws



P/N: N/A

Gloves

To protect LCD Panel and your hand



P/N: (L) N/A (M) N/A

C/D Disassembly Tool

Use C/D Disassembly Tool to open cosmetic cover and avoid scratch.



P/N: N/A


Spacer Screwdriver

Use a spacer screwdriver to fasten/remove spacer screws or hex screws.



P/N: N/A

2. Remove stand and base.

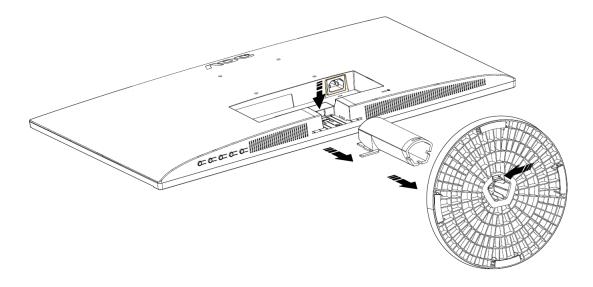

3. Remove screws.




4. Use disassembly tool to open all the latches along the edge of rear cover.




5. Disconnect the connector.




6. Take off all of the tapes and disconnect the connectors

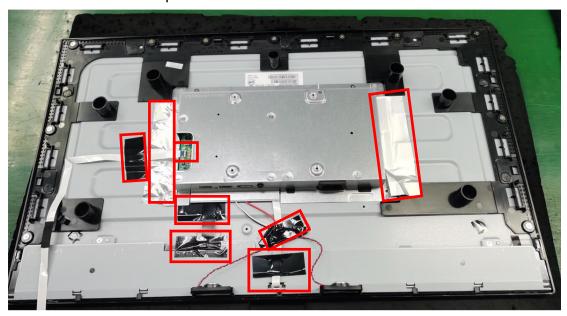


7. Remove screws.

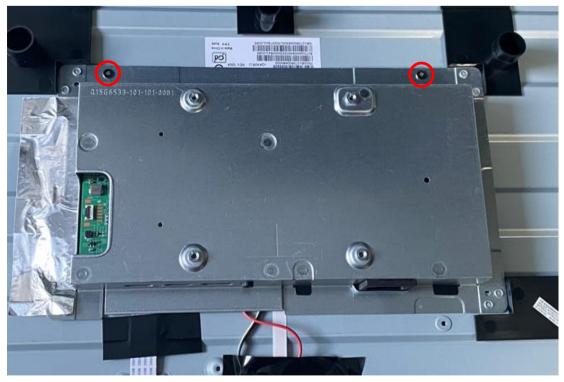


8. Remove mylar.

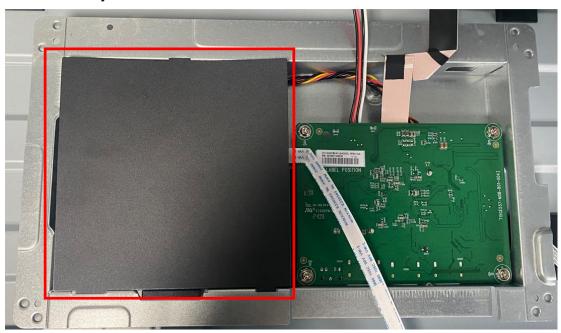


9. Remove screws to get boards.

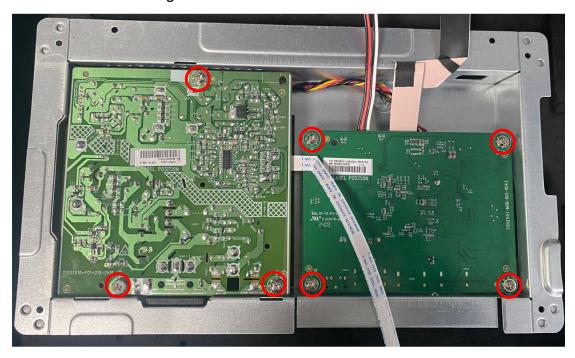

Main board

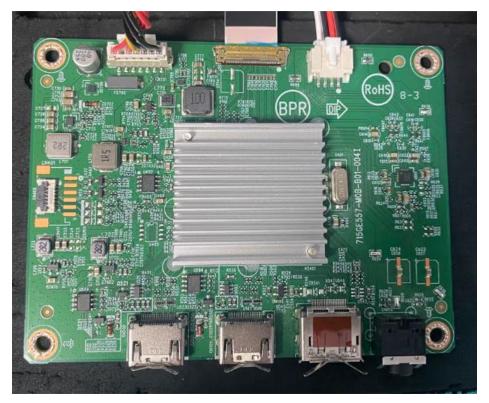

Power board

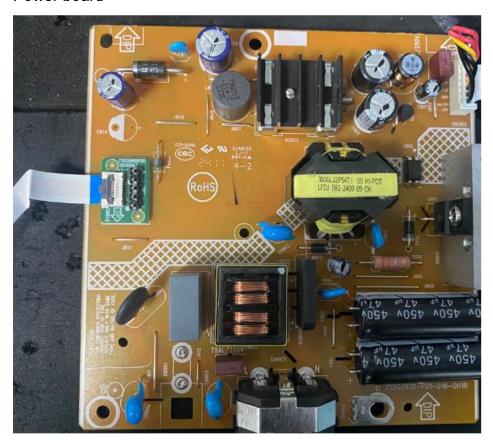

10. Remove screws to get middle frame and panel.

