

LCD Monitor User Manual PDS241/PDS271 LED backlight



©2017 AOC. All Rights Reserved.

| Safety | 3 |
|-----------------------------------------------------------------|----|
| National Conventions | 3 |
| Power | 4 |
| Installation | 5 |
| Cleaning | 6 |
| Other | 7 |
| Setup | 8 |
| Contents in Box | 8 |
| justing Viewing Angle | 9 |
| Connecting the Monitor | 10 |
| Adjusting | 11 |
| Setting Optimal Resolution | 11 |
| Windows 10 | 11 |
| Windows 8 | 13 |
| Windows 7 | 15 |
| Hotkeys | 17 |
| OSD Setting | 18 |
| LED Indicator | 19 |
| Driver | 20 |
| Monitor Driver | 20 |
| Windows 10 | 20 |
| Windows 8 | 24 |
| Windows 7 | 28 |
| i-Menu | 32 |
| e-Saver | 33 |
| Screen+ | 34 |
| Troubleshoot | 35 |
| Specification | |
| General Specification (PDS241) | |
| General Specification (PDS271) | |
| Preset Display Modes | |
| Pin Assignments | 40 |
| Plug and Play | 41 |
| Regulation | |
| FCC Notice | 42 |
| WEEE Declaration | 43 |
| WEEE Declaration for India | 43 |
| EPA Energy Star | 45 |
| EPEAT Declaration | 45 |
| Service | 46 |
| Warranty Statement for Europe | 46 |
| Warranty Statement for Middle East and Africa (MEA) | 48 |
| AOC International (Europe) B.V. | 50 |
| | |
| Warranty Statement for North & South America (excluding Brazil) | |

Safety

National Conventions

The following subsections describe notational conventions used in this document.

Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, cautions, and warnings, and they are used as follows:



NOTE: A NOTE indicates important information that helps you make better use of your computer system.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.

Power

The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.

A Do not overload power strips and extension cords. Overloading can result in fire or electric shock.

A The wall socket shall be installed near the equipment and shall be easily accessible.

Installation


Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.

Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor.

Lo not place the front of the product on the floor.

Leave some space around the monitor as shown below. Otherwise, air-circulation may be inadequate hence overheating may cause a fire or damage to the monitor.

See below the recommended ventilation areas around the monitor when the monitor is installed with the stand:

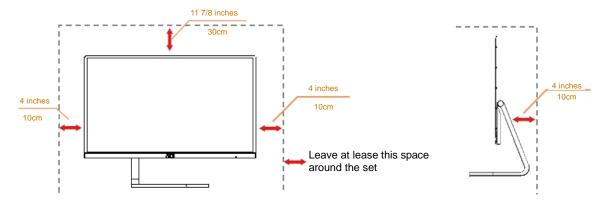


Installed with stand

Cleaning

Clean the cabinet regularly with cloth. You can use soft-detergent to wipe out the stain, instead of strong-detergent which will cauterize the product cabinet.

When cleaning, make sure no detergent is leaked into the product. The cleaning cloth should not be too rough as it will scratch the screen surface.

Please disconnect the power cord before cleaning the product.

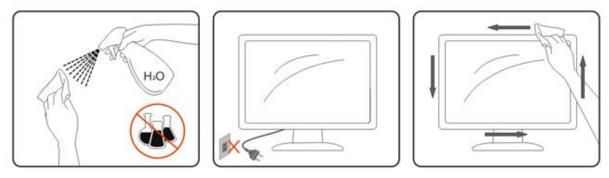

Other

If the product is emitting a strange smell, sound or smoke, disconnect the power plug IMMEDIATELY and contact a Service Center.

All Make sure that the ventilating openings are not blocked by a table or curtain.


L Do not engage the LCD monitor in severe vibration or high impact conditions during operation.

LO not knock or drop the monitor during operation or transportation.

For display with glossy bezel the user should consider the placement of the display as the bezel may cause disturbing reflections from surrounding light and bright surfaces.

Setup

Contents in Box

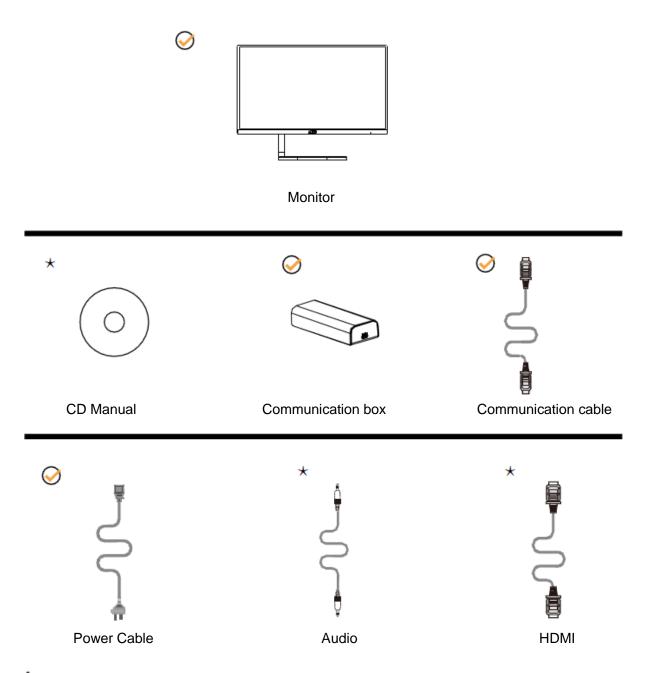

* Not all signal cables (Audio, HDMI, Communication cables),CD manual will be provided for all countries and regions. Please check with the local dealer or AOC branch office for confirmation.

justing Viewing Angle

For optimal viewing, it is recommended to look at the full face of the monitor, and then adjust the monitor's angle to your own preference.

Hold the stand so you will not topple the monitor when you change the monitor's angle.

You are able to adjust the monitor's angle from -5° to 23 °.






Do not adjust the viewing angle over 23 degrees in order to avoid damage.

Connecting the Monitor

Cable Connections In Communication box and Computer:

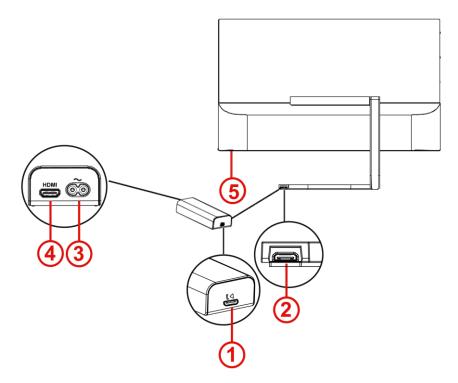

- 1 Communication output
- 2 Communication input
- 3 Power
- 4 HDMI
- 5 Earphone out

To protect equipment, please be noted item as follows

- Always turn off the PC and LCD monitor before connecting.
- Please do not insert or pull out communication cable in use
- Please follow the connecting order as below
- 1 Connect one end of the communication cable to the communication box and connect the other end to the monitor's communication port.
- 2 Connect the power cable to the AC port on the communication box.
- 3 Connect one end of the HDMI cable to the communication box and connect the other end to the computer's HDMI port.
- 4 Turn on your monitor and computer.

If your monitor displays an image, installation is complete. If it does not display an image, please refer Troubleshooting.

* Please do not use other type communication cable, communication cable is not MINI HDMI cable.


Adjusting

Setting Optimal Resolution

Windows 10

For Windows 10:

- Right click START.
- Click "CONTROL PANEL".

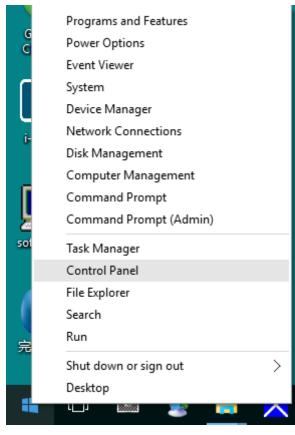

Click "DISPLAY".

٠

| All Control Panel Items | | | | | – ¤ × |
|--------------------------------------------------------------|--------------------------------------|-----------------------------------|-------------------------------|----------------------------|----------------------------|
| + + + T II > Control Panel > | All Control Panel Items | | | | v 8 Search Control Panel P |
| File Edit View Tools Help Adjust your computer's settings | ι. | | | | View by: Large icons * |
| Administrative Tools | AutoPlay | Backup and Restore (Windows 7) | RitLocker Drive Encryption | Color Management | |
| Credential Manager | Date and Time | Default Programs | Device Manager | Devices and Printers | |
| Display | Ease of Access Center | Elo 触摸屏配置 | File Explorer Options | File History | |
| Flash Player (32-bit) | A Fonts | • HomeGroup | Indexing Options | Internet Options | |
| Keyboard | 🚰 Language | J Mouse | Network and Sharing Center | Personalization | |
| Phone and Modem | Power Options | Programs and Features | Realtek HD Audio Manager | Recovery | |
| Region | RemoteApp and Desktop Connections | Security and Maintenance | Sound | General Speech Recognition | |
| Storage Spaces | Sync Center | System | Taskbar and Navigation | Troubleshooting | |
| See Accounts | Windows Defender | Windows Firewall | Work Folders | 48件 (32-bit) | |

• Click on the "Change display settings" button.

| 🗾 Display | | _ | × |
|--------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|---|
| ← → ∽ ↑ | l Panel → All Control Panel Items → Display 🗸 🌣 | Search Control Panel | P |
| File Edit View Tools Help | p | | |
| Control Panel Home | Change size of items | | |
| Adjust resolution Calibrate color | To change the size of text, apps, and other items, <u>use these display settings</u> . If you want to temporarily enlarge a portion of your screen, use <u>Magnifier</u> . If neither of these makes the changes you want, you can <u>set a custom</u> <u>scaling level</u> (not recommended). Setting custom levels can lead to unexpected behavior on some displays. | | |
| Change display settings | | | |
| Adjust ClearType text | Change only the text size | | |
| | Instead of changing the size of everything on the desktop, change only the text size for a specific item. | | |
| | Title bars v 9 v Bold | | |
| | Apply | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| See also | | | |
| Personalization | | | |
| Devices and Printers | | | |

Set the resolution **SLIDE-BAR** to Optimal preset resolution.

٠

| Screen Resolution | | | - | × |
|---------------------------|------------------------------------------------------------------------------------------|--------------------|----------------------|---|
| ← → × ↑ 💷 > Control Pa | nel > All Control Panel Items > Display > Screen Resolution | v 0 | Search Control Panel | P |
| File Edit View Tools Help | | | | |
| | Change the appearance of your display | | | |
| | | Detect Identify | | |
| | Display: 1. B24 V Resolution: 1920 × 1080 (Recommended) V Orientation: Landscape V | | | |
| | | Advanced settings | | |
| | Make text and other items larger or smaller What display settings should I choose? | | | |
| | | OK Cancel Apply | | |
| | | | | |
| | | | | |
| | | | | |

Windows 8


For Windows 8:

• Right click and click All apps at the bottom-right of the screen.



| Apps | | | | |
|---------------------|----------|------------------------------|-------------------------------|----------------------------------|
| b Bing | Reader | | WordPad | Computer |
| Calendar | SkyOnive | Galculator | XPS Wewer | Control Panel |
| Camera | Sports | Character Map | | Default Programs |
| Desktop | Store 💼 | Math Input Panel | Magnifier | Carl File Explorer |
| Finance | Travel | Motepad | Navrator | Piep and Support |
| Games | Wdeo | of Part. | On-Screen Keyboard | ш ал |
| C Internet Explorer | Weather | Remote Desktop Connection | Windows Speech Recognition | with Manager |
| Mail | | Sripping Tool | | Windows Defender |
| Maps | | Sound Recorder | GPUNIew | S Windows Lasy Transfer |
| Messaging | | Steps Recorder | GPUView Help | Windows Easy Transfer Reports |
| Music | | Sticky Notes | Windows Performance | Windows PowerShell |
| News | | Windows Fax and Scan | Windows Performance | |
| People | | Windows Journal | | |
| Photos | | Windows Media Player | Command Prompt | |

- Set the "View by" to "Category".
- Click "Appearance and Personalization".

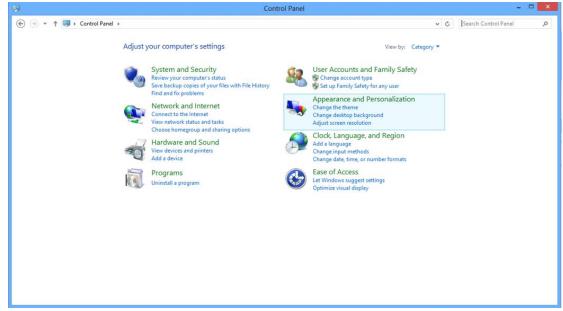


- Click "DISPLAY". ٠ - 🗆 🗙 -Appearance and Personalization ✓ ♂ Search Control Panel P Control Panel Home
 System and Security
 Network and Internet
 Hardware and Sound
 Programs
 Display
 Make text and other items larger or smaller
 Adjust screen resolution Programs User Accounts and Family Safety Taskbar Customize icons on the taskbar Appearance and
 Personalization Sase of Access Center Accommodate low vision | Use screen reader | Turn on easy access keys | Turn High Contrast on or off Clock, Language, and Region Folder Options Specify single- or double-click to open Show hidden files and folders Ease of Access Fonts
 Preview, delete, or show and hide fonts
 Change Font Settings
 Adjust ClearType text
- Set the resolution SLIDE-BAR to Optimal preset resolution

| | | Screen Resolution | | | × |
|-------------------------|----------------------------------------------------------|---------------------------------------------------------------------------------------------|-------------------|--------------------------|-----|
| 🛞 🎯 👻 🕆 🖉 🕨 Control Par | el + Appearance and Personalization + Change the appe | Display + Screen Resolution arance of your display | | ✓ C Search Control Panel | م ا |
| | | 1 | Detect | | |
| | | PLX2780H v 220 × 1080 (Recommended) v High 1920 × 1080 (Recommended) 1600 × 900 | Advanced settings | | |
| | | 1024 × 768 Low | OK Cancel Apply | | |

Windows 7

For Windows 7:

- Click START.
- Click "CONTROL PANEL".

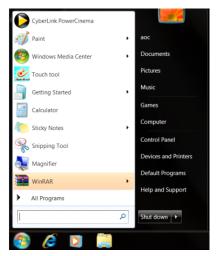


• Click "Appearance".


| Destop Gabgets Construct Gabgets | Date and Time wa Devices and Printers Fonts Internet Options Network and Sharing Center | Default Programs Display Getting Started Keyboard | |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|--|
| Exe of Access Center Information Index of Access Center Information Another Sensor Mouse Motion Motion Performance Information and Tools Information and Tools | Fonts | Getting Started | |
| HomeGroup JohneGroup Location and Other Semans If Mouse WMDIA Control Flamet If MVDIA Physic Performance Fundemation and Tools Performance fundemation | Internet Options | | |
| S Location and Other Sensors WIDIA Control Panel Performance Information and Tools Performance Information and Tools Personalization | | - Keyboard | |
| NVIDIA Control Panel NVIDIA Physik Performance Information and Tools Personalization | Network and Sharing Center | | |
| Performance Information and Tools 🗧 Personalization | | Real Notification Area lcons | |
| | Rarental Controls | / Pen and Touch | |
| | Phone and Modern | Power Options | |
| Programs and Features 🛛 🖉 Realtek HD Audio Manager | Recovery | Region and Language | |
| RemoteApp and Desktop Connections 🕘 Sound | Ø Speech Recognition | Sync Center | |
| System Tablet PC Settings | Taskbar and Start Menu | Troubleshooting | |
| 🖁 User Accounts 🤱 Windows Anytime Upgrade | Windows CardSpace | Ne Windows Defender | |
| 🖁 Windows Firewall 🛛 👌 Windows Update | | | |

Click "DISPLAY".

•

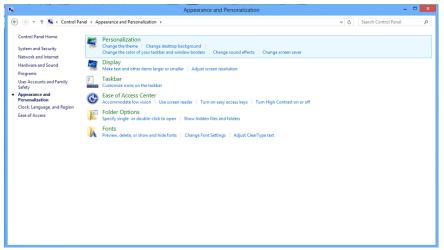


• Click on the "Change display settings" button.

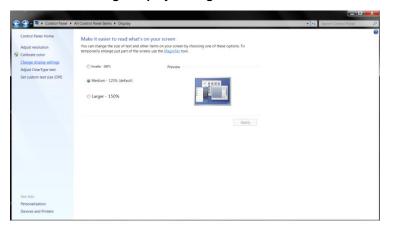


Set the resolution SLIDE-BAR to Optimal preset resolution

•

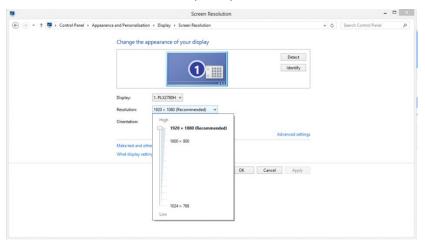

Hotkeys

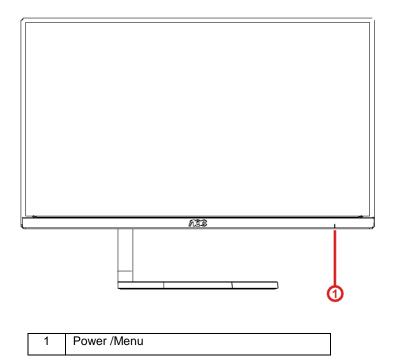


Power/Menu

When Power off, press $\, \mho \,$ button to turn on the monitor.

When Power on, press 0 button continuously about 3 seconds to turn off the monitor.

OSD Setting

Basic and simple instruction on the control keys.



1).Press the bottom key 0 to activate the OSD window.

2). You can now select any one of the functions by quickly repeat-pressing the bottom key. The blue box will navigate towards the right as you press the key. You can release once the blue box highlights the option you want to choose. Note that the selection is one way loop always moving one direction and then returning at beginning of the menu. The blue box will remain on the selected function for about 3 seconds and the function icon will flash three times to confirm the choice visible on the 1st layer of the OSD and activate it.

| Brightness | -Ò- | 0-100 | Adjust brightness from 0~100 |
|------------|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------|
| Contrast | igodot | 0-100 | Adjust contrast from 0~100 |
| Volume | | 0-100 | Adjust Volume from 0~100 |
| | OD | Weak | |
| Overdrive | 00 | Medium | Adjust the response time. |
| Overdrive | | Strong | Aujust the response time. |
| | | Off | |
| | LB | Weak | |
| Low Blue | LD | Medium | Decrease blue light wave by |
| Light | | Strong | controlling color temperature |
| | | Off | |
| Language | | English, France, Spanish, Portuguese, German, Italian, Dutch, Swedish, Finnish, Polish, Czech, Russia, Korea, T Chinese,S Chinese, Japanese. | Select the OSD language Default is English. |
| Exit | 5 | | Exit the main OSD |

- 1. Main menu will disappear if no action for about 3 seconds...
- 2. Sub menu will disappear if no action for about 3 seconds..
- 3. Before entering OSD menu, monitor will be powered off when continually pressing the bottom key for more than 3 seconds.
- 4. Those functions such as Gamma, ECO Mode, Color Temperature, DCB mode, Picture Boost and so on can only be listed in i-Menu.

LED Indicator


| Status | LED Color |
|-----------------|-----------------|
| Full Power Mode | Blue |
| Power Saving | Flickering blue |

Driver

Monitor Driver


Windows 10

- Start Windows® 10
- Right click START.
- Click "Control Panel".

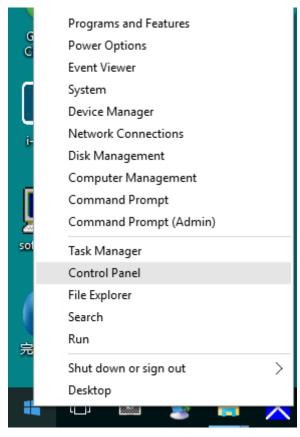

Click on the "Display" icon.

٠

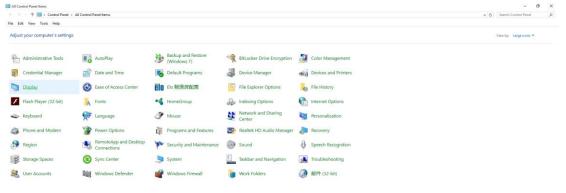


Click on the "Change display settings" button

| 🛄 Display | | - | × |
|-----------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|---|
| $\leftarrow \rightarrow \cdot \uparrow \blacksquare \cdot \text{Control P}$ | anel > All Control Panel Items > Display V 🖏 | Search Control Panel | P |
| File Edit View Tools Help | | | |
| Control Panel Home | Change size of items | | 2 |
| Adjust resolution Calibrate color | To change the size of text, apps, and other items, <u>use these display settings</u> . If you want to temporarily enlarge a portion of your screen, use <u>Magnifier</u> . If neither of these makes the changes you want, you can <u>set a custom</u> <u>scaling level</u> (not recommended). Setting custom levels can lead to unexpected behavior on some displays. | | |
| <u>Change display settings</u> Adjust ClearType text | Change only the text size | | |
| | Instead of changing the size of everything on the desktop, change only the text size for a specific item. | | |
| | Apply | | |
| | - (997) | | |
| | | | |
| | | | |
| | | | |
| See also | | | |
| Personalization | | | |
| Devices and Printers | | | |

• Click the "Advanced Settings" button.

| Screen Resolution | | | – 🗆 X |
|---------------------------|------------------------------------------------------------------------------------------|-------------------|----------------------|
| ← → × ↑ 🗔 > Control Pane | I > All Control Panel Items > Display > Screen Resolution | ٽ v | Search Control Panel |
| File Edit View Tools Help | | | |
| | Change the appearance of your display | | |
| | | Detect | |
| | Display: 1. B24 ~ Resolution: 1920 × 1080 (Recommended) ~ Orientation: Landscape ~ | | |
| | | Advanced settings | |
| | Make text and other items larger or smaller What display settings should I choose? | | |
| | | OK Cancel Apply | |
| | | | |

• Click the "Monitor" tab and then click the "Properties" button.

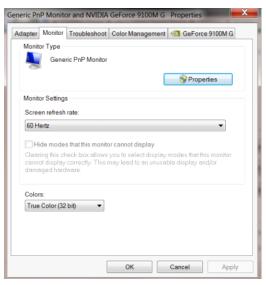


• Click the "Driver" tab.


| Generic PnF | Seneric PnP Monitor Properties | | | | | |
|-------------|--------------------------------|-------------------------------------------------------------------------------------------------|--|--|--|--|
| General | Driver Details | | | | | |
| | Generic PnP Mor | nitor | | | | |
| | Driver Provider: | Microsoft | | | | |
| | Driver Date: | 6/21/2006 | | | | |
| | Driver Version: | 6.1.7600.16385 | | | | |
| | Digital Signer: | Microsoft Windows | | | | |
| Driv | ver Details | To view details about the driver files. | | | | |
| Upd | ate Driver | To update the driver software for this device. | | | | |
| Roll I | Back Driver | If the device fails after updating the driver, roll back to the previously installed driver. | | | | |
| [| Disable | Disables the selected device. | | | | |
| ι | Jninstall | To uninstall the driver (Advanced). | | | | |
| | | OK Cancel | | | | |

• Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver... "and then


click the "Browse my computer for driver software" button.

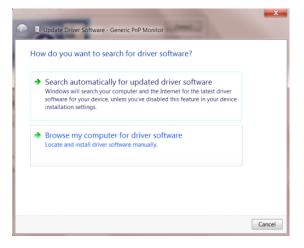

Select "Let me pick from a list of device drivers on my computer".

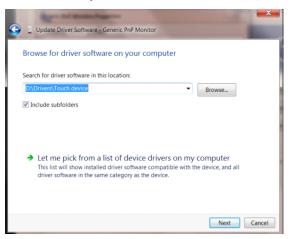

• Click the **"Have Disk"** button. Click on the **"Browse"** button and navigate to the following directory: X:\Driver\module name(where X is the drive letter designator for the CD-ROM drive).

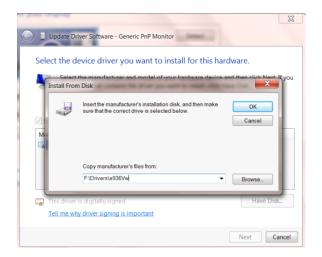

- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk

drive.

•

- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

Windows 8

- Start Windows® 8
- Right click and click **All apps** at the bottom-right of the screen.



- Click on the "Control Panel" icon
- Set the "View by" to "Large icons" or "Small icons".

| | | All Control Pane | i Items | | - 0 |
|--------------------------------|-------------------------|--------------------------------------|----------------------------|--------------------------------------|-----------------------|
| 🕘 🕤 🕈 🥵 > Control Panel > | All Control Panel Items | | | v ₫ Sear | ch Control Panel |
| djust your computer's settings | | | | View b | y: Large icons * |
| | | | | | Category Large icons |
| Action Center | Administrative Tools | AutoPlay | RitLocker Drive Encryption | Color Management | Small icons |
| Credential Manager | Date and Time | E Default Programs | 🍶 Device Manager | Devices and Printers | |
| Display | 🚱 Ease of Access Center | Family Safety | 😺 File History | Flash Player (32-bit) | |
| Folder Options | K Fonts | 🤣 HomeGroup | lndexing Options | Real Internet Options | |
| Keyboard | 📌 Language | Location Settings | I Mouse | Network and Sharing Center | |
| Notification Area Icons | NVIDIA Control Panel | Performance Information and Tools | Personalization | Phone and Modern | |
| Power Options | Programs and Features | Recovery | 🔗 Region | RemoteApp and Desktop Connections | |
| Sound | Speech Recognition | Storage Spaces | Sync Center | 🎉 System | |
| Taskbar | Troubleshooting | See Accounts | 😻 Windows 7 File Recovery | Windows Defender | |
| Windows Firewall | Windows Update | | | | |

| 🧀 🚞 👳 | | | 11:15 PM 12/25/2012 |
|-------|--|--|------------------------|

Click on the "Display" icon.

•

٠

| Clork Management Construit Management | |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Discret Answer Center Ender Options Fronts Gening Stated Monne/Croup Jahr Indexing Options Internet Options Internet Options Internet Options Exceloral and Other Sensin Ø Mone Internet Options Internet Options Internet Options MODA Cores Reel Money Internet Contexts / Internet Contexts / Internet Contexts MODA Cores Reel Money Internet Contexts / Internet Contexts / Internet Contexts | |
| Home-Group July Indexing Options € Internet Options ← Keyboard Bic Lockinia and Other Senson If Manae It Methods and Sharing Cetter It Methods Area Joon MODA Create Sharing If Modae If Methods and Sharing Cetter If Methods Area Joon MODA Concels Sharing If Modae If Methods Area Joon If Prevent Cetters / Prevent Goods Informance Johnson and Doot If Revensitation and Doot If Prevent Cetters / Prevent Goods | |
| B Locator and Other Sensors → Mouse B Mouse B Mouse Control and Sharing Center A Motion And Sharing Center A Motion Control and Center A Motion Control and Center A Motion Control and Center A Motion Resolution A Motion and Motion B Motion Resolution A Motion and Motion B Motion Resolution A Motion and Motion B Motion Resolution A Resolution Resolution A Resolution Resolution A Resolution Resolution A Resolution Resolu | |
| WDDAX Control Panel WIDDAX PrepsX Bernstal Controls / Pen and Touch Reformance Information and Tools Fersonalization Bernor Addeem Prover Options | |
| Renformance Information and Tools 🦉 Personalization 😂 Phone and Modern 🍞 Power Options | |
| | |
| 🛛 Programs and Features 💦 Realitek HD Audio Manager 🐝 Recovery 🤗 Region and Language | |
| | |
| 🐓 RemoteApp and Desktop Connections 🛛 🕘 Sound 🕹 Speech Recognition 🛞 Sync Center | |
| 🗣 System 📓 Tablet PC Settings 🛄 Taskbar and Start Menu 📑 Troubleshooting | |
| 🖁 User Accounts 🗧 📲 Windows Anytime Upgrade 🛛 📲 Windows Card Space 🖉 Windows Defender | |
| 🖁 Windows Firewall 🖉 Windows Update | |


Click on the "Change display settings" button.

| 🕒 😜 - 🔍 🔹 Control Panel I | All Control Panel Items > Display | | Search Central Panel |
|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|----------------------|
| Control Panel Home Adjust resolution | Make it easier to read what's or You can change the size of text and othe temporarily enlarge just part of the scree | r items on your screen by choosing one of these options. To | |
| Change display settings Adjust ClearType text | 🕐 Smaller - 100% | Preview | |
| Set custom text size (DPI) | Medium - 125% (default) | | |
| | O Larger - 150% | | |
| | | Apply | |
| | | | |
| | | | |
| | | | |
| See also | | | |
| Personalization | | | |
| Devices and Printers | | | |

• Click the "Advanced Settings" button.

| 😋 🌍 = 🔍 + Control Panel + All Control Panel Ite | ns Display Screen Resolution | - + Search Control Panel |
|-------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|
| | Change the appearance of your display | |
| | Draplay: L. Neidau Defaut Ha Panel Resolution: 1920 = 1980 (recommended) Orientation: Landicape Advanced actings Mate toot and other. Heres larger or wratter What display settings hould I choose? | |
| | OK Cancel Apply | |

Click the "Monitor" tab and then click the "Properties" button.

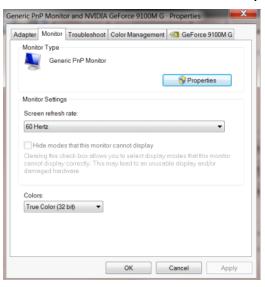


• Click the "Driver" tab.

•

| Generic PnP Monitor Properties | | | | |
|--------------------------------|------------------|-------------------------------------------------------------------------------------------------|--|--|
| General | Driver Details | | | |
| | Generic PnP Mor | nitor | | |
| | Driver Provider: | Microsoft | | |
| | Driver Date: | 6/21/2006 | | |
| | Driver Version: | 6.1.7600.16385 | | |
| | Digital Signer: | Microsoft Windows | | |
| Driv | ver Details | To view details about the driver files. | | |
| Upd | ate Driver | To update the driver software for this device. | | |
| Roll I | Back Driver | If the device fails after updating the driver, roll back to the previously installed driver. | | |
| [| Disable | Disables the selected device. | | |
| ι | Jninstall | To uninstall the driver (Advanced). | | |
| | | OK Cancel | | |

• Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver..." and

then click the "Browse my computer for driver software" button.

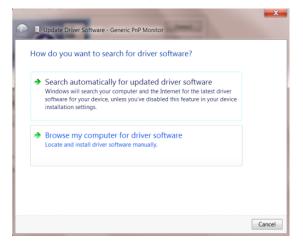

Select "Let me pick from a list of device drivers on my computer".



•

• Click the "Have Disk" button. Click on the "Browse" button and navigate to the following directory:


X:\Driver\module name (where X is the drive letter designator for the CD-ROM drive).



- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk drive.
- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

Windows 7

- Start Windows® 7
- Click on the "Start" button and then click on "Control Panel".

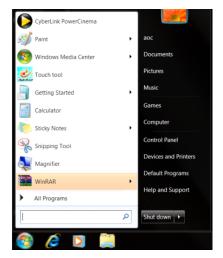

• Click on the "Display" icon.

| Action Center | Administrative Tools | AutoPlay | He Backup and Restore | |
|-----------------------------------|---------------------------|----------------------------|------------------------------|--|
| | Credential Manager | a Date and Time | Default Programs | |
| | J Device Manager | ma Devices and Printers | Display | |
| Ease of Access Center | E Folder Options | Fonts | Getting Started | |
| HomeGroup | A Indexing Options | C Internet Options | Keyboard | |
| Location and Other Sensors | I Mouse | Stewark and Sharing Center | Notification Area Icons | |
| NVIDIA Control Panel | MVIDIA PhysX | 🍂 Parental Controls | / Pen and Touch | |
| Performance Information and Tools | Personalization | Phone and Modern | Power Options | |
| Programs and Features | Prealtek HD Audio Manager | 📽 Recovery | Segion and Language | |
| RemoteApp and Desktop Connections | Sound | Ø Speech Recognition | Sync Center | |
| System | Tablet PC Settings | Taskbar and Start Menu | Troubleshooting | |
| User Accounts | 🕵 Windows Anytime Upgrade | Windows CardSpace | Net Windows Defender | |
| Windows Firewall | 💐 Windows Update | | | |
| | | | | |
| | | | | |
| | | | | |


• Click on the "Change display settings" button.

| Control Panel | All Control Panel Items > Display | | |
|----------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|---|
| Control Panel Home Adjust resolution Calibrate color Change disaby settings Adjust Clearly be text Set custom text size (DPI) | Make it easier to read what's on You an change the size of tent and othe temporarily enlarge just part of the score © snuter: 30% @ Medium - 12% (default) © Larger - 150%. | r items on your screen by choosing one of these options. To | 0 |
| | | Apply | |
| See also | | | |
| Personalization Devices and Printers | | | |
| Contract and Plinkers | | | |

• Click the "Advanced Settings" button.

| 🚱 🕘 = 🔍 + Control Panel + All Control Panel Ite | ms + Display + Screen Resolution | Search Control Panel |
|-------------------------------------------------|---------------------------------------------------------------------------------------|----------------------|
| | Change the appearance of your display | |
| | Detect Beenly | |
| | Display: 1. Nvidia Default Flat Panel 💌 | |
| | Resolution: 1920 × 1080 (recommended) • | |
| | Orientation: Landscape 💌 | |
| | Advanced settings | |
| | Make text and other items larger or smaller What display settings should I choose? | |
| | OK Cancel Apply | |
| | | |
| | | |
| | | |
| | | |

Click the **"Monitor"** tab and then click the **"Properties"** button.

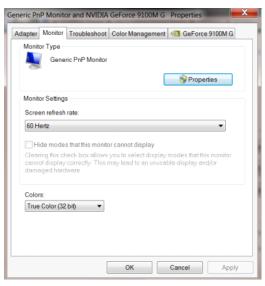

Click the "Driver" tab.


٠

٠


| Generic PnP Monitor Proper | ties |
|----------------------------|----------------------------------------------------------------------------------------------|
| General Driver Details | |
| Generic PnP Mor | nitor |
| Driver Provider: | Microsoft |
| Driver Date: | 6/21/2006 |
| Driver Version: | 6.1.7600.16385 |
| Digital Signer: | Microsoft Windows |
| Driver Details | To view details about the driver files. |
| Update Driver | To update the driver software for this device. |
| Roll Back Driver | If the device fails after updating the driver, roll back to the previously installed driver. |
| Disable | Disables the selected device. |
| Uninstall | To uninstall the driver (Advanced). |
| | OK Cancel |

• Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver... " and

then click the "Browse my computer for driver software" button.

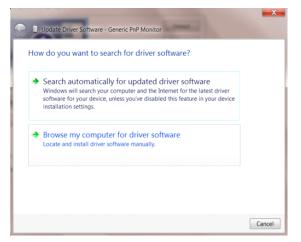

• Select "Let me pick from a list of device drivers on my computer".

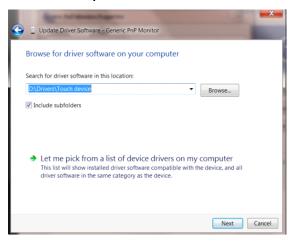

Click the "Have Disk" button. Click on the "Browse" button and navigate to the following directory:

X:\Driver\module name(where X is the drive letter designator for the CD-ROM drive).

| 🕞 👖 Update D | river Software - Generic PnP Monitor | X |
|--------------|-------------------------------------------------------------------------------------------------------------|----------------------------|
| Select the c | levice driver you want to install for this har | dware. |
| Install From | the manufacturer and model of your hardware device on Disk | and then click Next If you |
| | Inset the manufacturer's installation disk, and then make sure that the correct drive is selected below. | OK Cancel |
| | Copy manufacturer's files from: F:\Drivers\e936Vw | Browse |
| | 'is digitally signed. hy driver signing is important | Have Disk |
| | | Next Cancel |

- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk

drive.

- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

i-Menu



Welcome to "i-Menu" software by AOC. i-Menu makes it easy to adjust your monitor display setting by using on screen menus instead of the OSD button on the monitor. To complete installation, please follow the installation guide.

| i-Menu | Lumi | nance | 98 |
|----------------|-----------------|--------------|--------------|
| | | | |
| | | × | |
| Contrast | 0 37 | 🔆 Brightness | 0 |
| γ Gamma | 🜒 🛛 Gamma 1 🛛 🕨 | 💠 Eco Mode | ∢ ∨ ⊳ |
| 🔤 DCR | | | |
| | | | \$ |
| | /10 | C | |

e-Saver



Welcome to use AOC e-Saver monitor power management software! The AOC e-Saver features Smart Shutdown functions for your monitors, allows your monitor to timely shutdown when PC unit is at any status (On, Off, Sleep or Screen Saver); the actual shutdown time depends on your preferences (see example below). Please click on "driver/e-Saver/setup.exe" to start installing the e-Saver software, follow the install wizard to complete software installation.

Under each of the four PC statuses, you may choose the desired time (in minutes) from the pull-down menu for your monitor to automatically shutdown. The example below illustrated:

- 1) The monitor will never shutdown when the PC is powered on.
- 2) The monitor will automatically shutdown 5 minutes after the PC is powered off.
- 3) The monitor will automatically shutdown 10 minutes after the PC is in sleep/stand-by mode.
- 4) The monitor will automatically shutdown 20 minutes after the screen saver appears.




You can click "RESET" to set the e-Saver to its default settings like below.



Screen+



Welcome to "Screen+" software by AOC. Screen+ software is a desktop screen splitting tool; it splits the desktop into different panels, and each panel displays a different window. You only need to drag the window to a corresponding panel when you want to access it. It supports multiple monitor display to make your task easier. Please follow the installation software to install it.

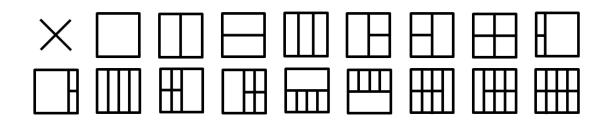

Troubleshoot

| Problem & Question | Possible Solutions |
|------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power LED Is Not ON | Make sure the power button is ON and the Power Cord is properly connected to a grounded power outlet and to the monitor. |
| No images on the screen | Is the power cord connected properly? Check the power cord connection and power supply. Is the cable connected correctly? (Connected using the D-sub cable) Check the DB-15 cable connection. (Connected using the DVI cable) Check the DVI cable connection. * DVI input is not available on every model. If the power is on, reboot the computer to see the initial screen (the login screen), which can be seen. If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows ME/2000) and then change the frequency of the video card. (Refer to the Setting the Optimal Resolution) If the initial screen (the login screen) does not appear, contact the Service Center or your dealer. Can you see "Input Not Supported" on the screen? You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly. Adjust the maximum resolution and frequency that the monitor can handle properly. Make sure the AOC Monitor Drivers are installed. |
| Picture Is Fuzzy & Has Ghosting Shadowing Problem | Adjust the Contrast and Brightness Controls. Press to auto adjust. Make sure you are not using an extension cable or switch box. We recommend plugging the monitor directly to the video card output connector on the back. |
| Picture Bounces, Flickers Or Wave Pattern Appears In The Picture | Move electrical devices that may cause electrical interference as far away from the monitor as possible. Use the maximum refresh rate your monitor is capable of at the resolution you are using. |

| Monitor Is Stuck In Active Off-Mode" | The Computer Power Switch should be in the ON position. The Computer Video Card should be snugly fitted in its slot. Make sure the monitor's video cable is properly connected to the computer. Inspect the monitor's video cable and make sure no pin is bent. Make sure your computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key. |
|---------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Missing one of the primary colors (RED, GREEN, or BLUE) | Inspect the monitor's video cable and make sure that no pin is damaged. Make sure the monitor's video cable is properly connected to the computer. |
| Screen image is not centered or sized properly | Adjust H-Position and V-Position or press hot-key (AUTO). |
| Picture has color defects (white does not look white) | Adjust RGB color or select desired color temperature. |
| Horizontal or vertical disturbances on the screen | Use Windows 95/98/2000/ME shut-down mode to adjust CLOCK and PHASE. Press to auto-adjust. |

Specification

General Specification (PDS241)

| | Model name | PDS241 | | | |
|---------------|----------------------------------|---------------------------------------------|-----------------------------|-----|--|
| Panel | Driving system | TFT Color LCD | | | |
| | Viewable Image Size | 60.47cm diagonal | | | |
| | Pixel pitch | 0.2745(H)mm x 0.2745(V)mm | | | |
| | Video | HDMI Interface | | | |
| | Display Color | 16.7M Colors | | | |
| | Dot Clock | 148.5MHz | | | |
| | Horizontal scan range | 30~83KHz | | | |
| | Horizontal scan Size(Maximum) | 527.04 mm | | | |
| | Vertical scan range | 50Hz ~ 76Hz | | | |
| | Vertical scan Size(Maximum) | 296.46 mm | | | |
| | Optimal preset resolution | 1920x1080@60Hz | | | |
| Others | Plug & Play | VESA DDC2B/CI | | | |
| | Input Connector | HDMI | | | |
| | Power Source | 100-240V~,50/60Hz | | | |
| | Power Consumption | Typical (Brightness = 90,Contrast = 50) 25W | | | |
| | | (Brightness = 100,Contrast = 100) | | 30W | |
| | | Power saving ≤0.5W | | | |
| | Off timer | 0-24 hrs | | | |
| | Height (with base) | 416.0mm | | | |
| Dimensions & | Width | 541.1mm | | | |
| Weight: | Depth | 178.5 mm | | | |
| | Weight (monitor only) | 3.15 kg | | | |
| Environmental | Temperature: | Operating | 0° to 40°C | | |
| | | Non-Operating | -25° to 55°C | | |
| | Humidity: | Operating | 10% to 85% (non-condensing) | | |
| | | Non-Operating | 5% to 93% (non-condensing) | | |
| | Altitude: | Operating | 0~ 5000m(0~ 16404 ft) | | |
| | | Non-Operating | 0~ 12192m (0~ 40000 | ft) | |


General Specification (PDS271)

| | Model name | PDS271 | | | |
|---------------|----------------------------------|---------------------------------------------|-----------------------------|------|--|
| Panel | Driving system | TFT Color LCD | | | |
| | Viewable Image Size | 68.6cm diagonal | | | |
| | Pixel pitch | 0.3114(H)mm x 03114(V)mm | | | |
| | Video | HDMI Interface | | | |
| | Display Color | 16.7M Colors | | | |
| | Dot Clock | 148.5MHz | | | |
| | Horizontal scan range | 30~83KHz | | | |
| | Horizontal scan Size(Maximum) | 597.888 mm | | | |
| | Vertical scan range | 50Hz ~ 76Hz | | | |
| | Vertical scan Size(Maximum) | 336.312 mm | | | |
| | Optimal preset resolution | 1920x1080@60Hz | | | |
| Others | Plug & Play | VESA DDC2B/CI | | | |
| | Input Connector | HDMI | | | |
| | Power Source | 100-240V∼,50/60Hz | | | |
| | Power Consumption | Typical (Brightness = 90,Contrast = 50) 30W | | | |
| | | (Brightness = 100,Contrast = 100) 40W | | 40W | |
| | | Power saving ≤0.5W | | | |
| | Off timer | 0-24 hrs | | | |
| | Height (with base) | 461.4mm | | | |
| Dimensions & | Width | 609.7mm | | | |
| Weight: | Depth | 179.1 mm | | | |
| | Weight (monitor only) | 4.15 kg | | | |
| | Temperature: | Operating | 0° to 40°C | | |
| | | Non-Operating | -25° to 55°C | | |
| Environmental | Humidity: | Operating | 10% to 85% (non-condensing) | | |
| | | Non-Operating | 5% to 93% (non-condensing) | | |
| | Altitude: | Operating | 0~ 5000m(0~ 16404 ft) | | |
| | | Non-Operating | 0~ 12192m (0~ 40000 | ft) | |

Preset Display Modes

| Standard | Resolution | H. Frequency (kHz) | V. Frequency (Hz) |
|----------------|----------------|--------------------|-------------------|
| VGA | 640x480@60Hz | 31.469 | 59.94 |
| VGA | 640x480@72Hz | 37.861 | 72.809 |
| VGA | 640x480@75Hz | 37.5 | 75 |
| SVGA | 800x600@56Hz | 35.156 | 56.25 |
| SVGA | 800x600@60Hz | 37.879 | 60.317 |
| SVGA | 800x600@72Hz | 48.077 | 72.188 |
| SVGA | 800x600@75Hz | 46.875 | 75 |
| XGA | 1024x768@60Hz | 48.363 | 60.004 |
| XGA | 1024x768@70Hz | 56.476 | 70.069 |
| XGA | 1024x768@75Hz | 60.023 | 75.029 |
| SXGA | 1280x1024@60Hz | 63.981 | 60.02 |
| SXGA | 1280x1024@75Hz | 79.976 | 75.025 |
| WXGA+ | 1440x900@60Hz | 55.935 | 59.887 |
| WXGA+ | 1440x900@60Hz | 55.469 | 59.901 |
| WSXGA | 1680x1050@60Hz | 65.29 | 59.954 |
| WSXGA | 1680x1050@60Hz | 64.674 | 59.883 |
| FHD | 1920x1080@60Hz | 67.5 | 60 |
| *** | 1280x960@60HZ | 60 | 60 |
| IBM MODES DOS | 720x400@70Hz | 31.469 | 70.087 |
| MAC MODES VGA | 640x480@67Hz | 35 | 66.667 |
| MAC MODES SVGA | 832x624@75Hz | 49.725 | 74.551 |
| MAC MODES XGA | 1024x768@75Hz | 60.241 | 74.927 |

Pin Assignments



18 2 19-Pin Color Display Signal Cable

| Pin No. | Signal Name | Pin No. | Signal Name |
|---------|--------------------|---------|--------------------------|
| 1 | TMDS Data 2+ | 11 | TMDS Clock Shield |
| 2 | TMDS Data 2 Shield | 12 | TMDS Clock |
| 3 | TMDS Data 2 | 13 | CEC |
| 4 | TMDS Data 1+ | 14 | Reserved (N.C. on device |
| 5 | TMDS Data 1Shield | 15 | SCL |
| 6 | TMDS Data 1 | 16 | SDA |
| 7 | TMDS Data 0+ | 17 | DDC/CEC Ground |
| 8 | TMDS Data 0 Shield | 18 | +5V Power |
| 9 | TMDS Data 0 | 19 | Hot Plug Detect |
| 10 | TMDS Clock + | | |

Plug and Play

Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.

Regulation

FCC Notice

FCC Class B Radio Frequency Interference Statement WARNING: (FOR FCC CERTIFIED MODELS)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

NOTICE:

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference. It is the responsibility of the user to correct such interference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WEEE Declaration

Disposal of Waste Equipment by Users in Private Household in the European Union.



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

This product complies with all implemented RoHS type regulations worldwide, including but not limited to, EU, Korea, Japan, US States (e.g. California), Ukraine, Serbia, Turkey, Vietnam and India. We continue to monitor, influence and develop our processes to comply with upcoming proposed RoHS type regulations, including but not limited to, Brazil, Argentina, Canada.

WEEE Declaration for India



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about E -waste please visit http://www.aocindia.com/ewaste.php and to know where you can drop off your waste equipment for recycling in India please contact on below given contact details.

Helpline number: 080-6788-6788 / 080-3323-1313 (Monday to Saturday, 10 a.m. to 6 p.m.)

Centralized E-waste collection center

Address: TPV Technology India Private Limited, 59, Maheswari Nagar, 1st Main Road, Mahadevapura Post, Whitefield Road, Bangalore, Karnataka, PIN: 560048, Tel: 080-3023-1000 E-mail: serviceindia@aoc.com

Restriction on Hazardous Substances statement (India)

This product complies with the "E-Waste (Management) Rules, 2016" CHAPTER V, rule 16, sub-rule (1). Whereas New Electrical and Electronic Equipment and their components or consumables or parts or spares do not contain Lead, Mercury, Cadmium, Hexavalent Chromium, polybrominated biphenyls and polybrominated diphenyl ethers beyond a maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated diphenyl ethers and of 0.01% by weight in homogenous materials for cadmium. except of exemptions set in Schedule 2 of the Rule.

EPA Energy Star



ENERGY STAR® is a U.S. registered mark. As an ENERGY STAR® Partner, AOC International (Europe) BV and Envision Peripherals, Inc. have determined that this product meets the ENERGY STAR® guidelines for energy efficiency. (FOR EPA CERTIFIED MODELS)

EPEAT Declaration



EPEAT is a system to help purchasers in the public and private sectors evaluate, compare and select desktop computers, notebooks and monitors based on their environmental attributes. EPEAT also provides a clear and consistent set of performance criteria for the design of products, and provides an opportunity for manufacturers to secure market recognition for efforts to reduce the environmental impact of its products.

AOC believes in protecting the environment. With a key concern for the conservation of natural resources, as well as landfill protection, AOC announces the launch of AOC monitor's packaging recycling program. This program is designed to help you discard of your monitor carton and filler materials properly. If a local recycling center is not available, AOC will recycle the packaging material for you, including foam filler and carton. AOC Display solution will only recycle AOC monitor packaging. Please refer to the following website address:

Only for North and South American, excluding Brazil: http://us.aoc.com/aoc-corporation/?page=environmental-impact For Germany: http://aoc-europe.com/de/content/environment For Brazil: http://www.aoc.com.br/pg/embalagem-verde

Service

Warranty Statement for Europe

LIMITED THREE-YEAR WARRANTY*

For AOC LCD Monitors sold within Europe, AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of Three (3) years after the original date of consumer purchase. During this period, AOC International (Europe) B.V. will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as *stated below. In the absent of the proof of purchase, the warranty will start 3 months after the date of manufacturing indicated on the product.

If the product appears to be defective, please contact your local dealer or refer to the service and support section on <u>www.aoc-europe.com</u> for the warranty instructions in your country. The freight cost for the warranty is pre-paid by AOC for the delivery and return. Please ensure you provide a dated proof of purchase along with the product and deliver to the AOC Certified or Authorized Service Center under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to
 protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

AOC International (Europe) B.V. will pay the return shipping charges within one of the countries specified within this warranty statement. AOC International (Europe) B.V. is not responsible for any costs associated with the transportation of product across international borders. This includes the international border within the European Union. If the LCD Monitor is not available for collection when the currier attends, you will be charged a collection fee.

* This limited warranty does not cover any losses or damages that occur as a result of:

- Damages during transport due to improper packaging
- Improper installation or maintenance other then in accordance with AOC's user manual
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or Authorized Service Center
- Improper environments like humidity, water damage and dusts
- Damaged by violence, earthquake and terrorist attacks
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modifications or alteration.

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

If your warranty has expired, you still have access to all available service options, but you will be responsible for the cost of service, including parts, labor, shipping (if any) and applicable taxes. AOC Certified or Authorized Service Center will provide you with an estimate of service costs before receiving your authorization to perform service.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more information, please visit: http://www.aoc-europe.com

Warranty Statement for Middle East and Africa (MEA)

And

The Commonwealth of Independent States (CIS)

LIMITED ONE to THREE YEARS WARRANTY*

For AOC LCD Monitors sold within the Middle East and Africa (MEA) and the Commonwealth of Independent States (CIS), AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of One (1) to Three (3) years from the manufacture date depending on sale country. During this period, AOC International (Europe) B.V. offers a Carry-In (return to Service Center) Warranty Support at an AOC's Authorized Service Center or Dealer and at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as *stated below. As a Standard Policy, the warranty will be calculated from the manufacture date identified from the product ID serial number, but the total warranty will be Fifteen (15) months to Thirty Nine (39) months from MFD (manufacture date) depending on sale country. Warranty will be considered for exceptional cases that are out of warranty as per the product ID serial number and for such exceptional cases; Original Invoice/Proof Of Purchase Receipt is mandatory.

If the product appears to be defective, please contact your AOC authorized dealer or refer to the service and support section on AOC's website for the warranty instructions in your country:

- Egypt: <u>http://aocmonitorap.com/egypt_eng</u>
- CIS Central Asia: <u>http://aocmonitorap.com/ciscentral</u>
- Middle East: <u>http://aocmonitorap.com/middleeast</u>
- South Africa: <u>http://aocmonitorap.com/southafrica</u>
- Saudi Arabia: <u>http://aocmonitorap.com/saudiarabia</u>

Please ensure you provide a dated proof of purchase along with the product and deliver to the AOC Authorized Service Center or Dealer under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

* This limited warranty does not cover any losses or damages that occur as a result of:

- Damages during transport due to improper packaging
- Improper installation or maintenance other then in accordance with AOC's user manual
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source

- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or Authorized Service Center
- Improper environments like humidity, water damage and dusts
- Damaged by violence, earthquakes and terrorist attacks
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modifications or alteration.

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

If your warranty has expired, you still have access to all available service options, but you will be responsible for the cost of service, including parts, labor, shipping (if any) and applicable taxes. AOC Certified, Authorized Service Center or dealer will provide you with an estimate of service costs before receiving your authorization to perform service.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF ONE (1) to THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more information, please visit: http://www.aocmonitorap.com



AOC International (Europe) B.V.

Prins Bernhardplein 200 / 6th floor, Amsterdam, The Netherlands Tel: +31 (0)20 504 6962 • Fax: +31 (0)20 5046933


AOC Pixel Policy ISO 9241-307 Class 1

July 25th, 2013

AOC strives to deliver the highest quality products. We use some of the industry's most advanced manufacturing processes and practice stringent quality control. However, pixel or sub pixel defects on the TFT monitor panels used in flat panel monitors are sometimes unavoidable. No manufacturer can guarantee that all panels will be free from pixel defects, but AOC guarantees that any monitor with an unacceptable number of defects will be repaired or replaced under warranty. This Pixel Policy explains the different types of pixel defects and defines acceptable defect levels for each type. In order to qualify for repair or replacement under warranty, the number of pixel defects on a TFT monitor panel must exceed these acceptable levels.

Pixels and Sub Pixel Definition

A pixel, or picture element, is composed of three sub pixels in the primary colors of red, green and blue. When all sub pixels of pixel are lit, the three colored sub pixel together appear as a single white pixel. When all are dark, the three colored sub pixels together appear as a single black pixel.

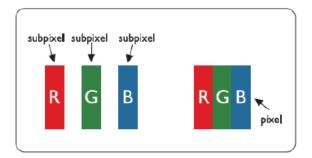

Types of Pixel Defects

- Bright Dot Defects: the monitor displays a dark pattern, sub pixels or pixels are always lit or "on"
- Black Dot Defects: the monitor displays a light pattern, sub pixels or pixels are always dark or "off".

| ISO 9241-307 | Defect Type 1 | Defect Type 2 | Defect Type 3 | | Defect Type 4 Black |
|--------------------|---------------|---------------|------------------|---|---------------------|
| Pixel Defect Class | Bright Pixel | Black Pixel | Bright Sub pixel | | Sub pixel |
| | | | 2 | + | 1 |
| Class 1 | 1 | 1 | 1 | + | 3 |
| | | | 0 | + | 5 |

AOC International (Europe) B.V.

Warranty Statement for North & South America (excluding Brazil)

WARRANTY STATEMENT

for AOC Color Monitors Including those Sold within North America as Specified

Envision Peripherals, Inc. warrants this product to be free from defects in material and workmanship for a period of three (3) years for parts & labor and one (1) year for CRT Tube or LCD Panel after the original date of consumer purchase. During this period, EPI (EPI is the abbreviation of Envision Peripherals, Inc.) will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as *stated below. The parts or product that are replaced become the property of EPI.

In the USA to obtain service under this limited warranty, call EPI for the name of the Authorized Service Center closest to your area. Deliver the product freight pre-paid, along with the dated proof of purchase, to the EPI Authorized Service Center. If you cannot deliver the product in person:

- Pack it in its original shipping container (or equivalent)
- Put the RMA number on the address label
- Put the RMA number on the shipping carton
- Insure it (or assume the risk of loss/damage during shipment)
- Pay all shipping charges

EPI is not responsible for damage to inbound product that was not properly packaged.

EPI will pay the return shipment charges within one of the countries specified within this warranty statement. EPI is not responsible for any costs associated with the transportation of product across international borders. This includes the international borders of the countries within this warranty statements.

In the United States and Canada contact your Dealer or EPI Customer Service, RMA Department at the toll free number (888) 662-9888. Or you can request an RMA Number online at www.aoc.com/na-warranty.

* This limited warranty does not cover any losses or damages that occur as a result of:

- Shipping or improper installation or maintenance
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an EPI Authorized Service Center
- Improper environment
- * Excessive or inadequate heating or air conditioning or electrical power failures, surges, or other irregularities

This three-year limited warranty does not cover any of the product's firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modification or alteration.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR AND ONE (1) YEAR FOR CRT TUBE OR LCD PANEL FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

EPI OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCLUSIVELY AS STATED HERE. EPI' LIABILITY, WHETHER BASED ON CONTRACT, TORT. WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL ENVISION PERIPHERALS, INC. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

In the United States of America, this limited warranty is only valid for Products purchased in the Continental United States, Alaska, and Hawaii.

Outside the United States of America, this limited warranty is only valid for Products purchased in Canada.

Information in this document is subject to change without notice. For more details, please visit:

USA: http://us.aoc.com/support/find_service_center ARGENTINA: http://ar.aoc.com/support/find_service_center BOLIVIA: http://bo.aoc.com/support/find_service_center CHILE: http://cl.aoc.com/support/find_service_center **COLOMBIA:** http://co.aoc.com/support/find_service_center COSTA RICA: http://cr.aoc.com/support/find_service_center DOMINICAN REPUBLIC: http://do.aoc.com/support/find_service_center ECUADOR: http://ec.aoc.com/support/find_service_center EL SALVADOR: http://sv.aoc.com/support/find_service_center GUATEMALA: http://gt.aoc.com/support/find_service_center HONDURAS: http://hn.aoc.com/support/find_service_center NICARAGUA: http://ni.aoc.com/support/find_service_center PANAMA: http://pa.aoc.com/support/find_service_center PARAGUAY: http://py.aoc.com/support/find_service_center PERU: http://pe.aoc.com/support/find_service_center URUGUAY: http://pe.aoc.com/support/find_service_center VENEZUELA: http://ve.aoc.com/support/find_service_center IF COUNTRY NOT LISTED: http://latin.aoc.com/support/find_service_center

EASE PROGRAME



Only for AOC branded monitors sold within the continental United States.

All AOC branded monitors are now covered by the EASE Program. If your monitor malfunctions at any time during the first three months, AOC will provide a replacement monitor within 72 hours after you are approved for our program. If your monitor qualifies for the EASE program, AOC will pay for freight both

ways.

Step 1: Phone our TECH Department at 888.662.9888.

Step 2: Fill out and return EASE registration forms by mail or fax.

Step 3: We will issue a Return Authorization Number upon verification into the program.

Step 4: A monitor will be advance shipped to your location.

Step 5: We will issue a UPS Call Tag to pick up the defective unit.

Step 6: Please review the following chart to see your EASE program qualifications.

| WARRANTY | COVERAGE AT | CUSTOMER |
|-----------------------------------|-----------------------------------|-----------------------------|
| PERIOD | NO CHARGE | CHARGES |
| Within the first three months of | - New AOC monitor - Call tag | - None* |
| purchase: Covered by EASE | dispatched and return freight | |
| | charges via UPS | |
| Between 4 months – 1 Year | - All Parts & Labor Including CRT | - UPS Return Freight to AOC |
| | Tube & LCD Panel | |
| Between 1 Year - 3 Years: Covered | - Parts & Labor (excluding CRT | - UPS Return Freight to AOC |
| by standard limited warranty | Tube & LCD Panel) | |

*AOC will need to obtain a credit card number if you would like to get a new AOC monitor advanced shipped to your location, prior to the defective unit arriving at AOC's service center. If you do not wish to supply a credit card, AOC will only ship the new monitor, once the defective unit arrives at the AOC service center.

